



 
 
 






 
 




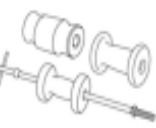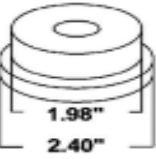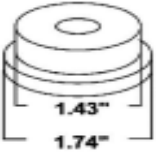



 

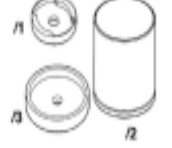 
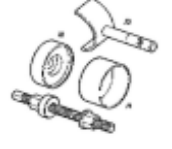 
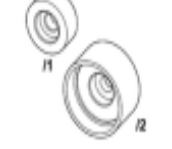 

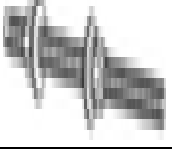 

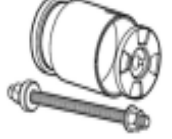 
2017 Ford and Lincoln New Dealer Kits' Contents

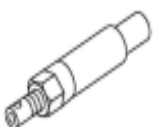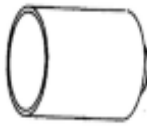Tool Number	Tool Name	Used to service Ford and Lincoln vehicles		Used to service only Lincoln vehicles		Tool Illustration
		Essential tools only 014-NDK-FL-2017	Desired tools only 014-DNDK-FL-2017	Essential tools only 014-NDK-L-2017	Desired tools only 014-DNDK-L-2017	
100-002	Dial Indicator Gauge with Holding Fixture	X		X		
100-010	Remover, O-Ring Seal	X				
100-D002	Dial Indicator Gauge with Holding Fixture		X		X	
100-D009	Rubber Tip Air Nozzle		X		X	 100-D009
100-D112	Slider Hammer Master Set		X		X	
204-020	Installer, Wheel Hub Bearing Cup	X		X		 1.98" 2.40"
204-023	Installer, Wheel Hub Bearing Cup	X		X		 1.43" 1.74"
204-029	Drawbar (Heavy Duty Threaded)	X		X		
204-034	Adapter for 204-S030	X		X		
204-037	Remover/Installer, Bearing Cup	X				 1.62" 1.93"

 
 






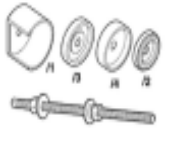

2017 Ford and Lincoln New Dealer Kits' Contents

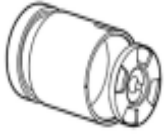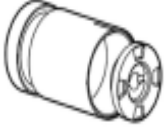204-069	Remover/Installer, Front Wheel Hub	X		X		
204-128	Adapter for 204-S127	X		X		
204-142	Remover/Installer, Lower Arm Bushing Receiver	X				
204-161	Installer, Halfshaft	X		X		
204-172	Remover/Installer, Ball Joint	X				
204-180	Remover/Installer, Bushing	X		X		
204-182	Remover, Ball Joint	X		X		
204-186	Remover, Front Differential Housing Bushing	X		X		
204-187	Installer, Front Differential Housing Bushing	X		X		
204-354	Gauge, Digital Tire Pressure	X		X		

 


 
 


 


2017 Ford and Lincoln New Dealer Kits' Contents

204-355	Remover/Installer, Ball Joint	X				
204-356	Remover/Installer, Radius Arm Axle Bushing	X				
204-358	Remover/Installer, Ball Joint	X		X		
204-362	Remover/Installer, Front Subframe Bushing	X		X		
204-589	ASSEMBLY, Spacer	X		X		
204-590	Replacer, Rear Knuckle Bushing	X				
204-592	Separator, Lower Arm Ball Joint	X		X		
204-594	Forcing Screw	X				
204-608	Remover, Bushing	X		X		
204-616	Remover/Installer, Rear Drive Unit Bushing (70 mm)	X		X		



 



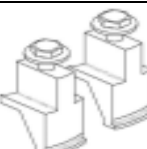 



2017 Ford and Lincoln New Dealer Kits' Contents

204-617	Remover/Installer, Rear Drive Unit Bushing (65 mm)	X		X		
204-618	Remover/Installer, Rear Drive Unit Bushing (60 mm)	X		X		
204-816	Tool, Rack Holding	X				
205-001	Spreader, Differential Carrier	X		X		
205-002	Installer, Drive Pinion Flange	X		X		
205-004	Installer, Drive Pinion Bearing Cone	X				
205-005	Installer, Drive Pinion Bearing Cone	X		X		
205-006	Installer, Drive Pinion Bearing Cup	X				
205-008	Remover, Differential Bearing	X				
205-010	Installer, Differential Side Bearing	X		X		

2017 Ford and Lincoln New Dealer Kits' Contents

205-012	Holding Fixture, Drive Pinion Flange	X				
205-014	Installer, Drive Pinion Bearing Cup	X				
205-018	Remover, Drive Pinion Flange	X				
205-022	Gauge, Differential Clutch	X		X		
205-024	Installer, Drive Pinion Bearing Cup	X		X		
205-036	Wrench	X				
205-055	Remover, Bearing	X		X		
205-062	Installer, Differential Bearing	X				
205-075	Installer, Rear Wheel Hub Seal	X				
205-086	Remover/Installer, C-Frame and Screw	X		X		

2017 Ford and Lincoln New Dealer Kits' Contents

205-090	Plate, Bearing/Oil Seal	X		X		
205-092	Installer, Rear Axle Bearing/Oil Seal	X				
205-098	Drawbar, Rear Axle	X				
205-099	Installer, Axle Bearing	X				
205-100	Installer, Axle Bearing	X				
205-1007	Socket, Axle Nut	X				
205-1010	Puller, RDU Coupler Coil	X				
205-1013	Installer, Rear Axle Pilot Bearing	X				
205-1014	Disc, Gauge	X				
205-1015	Tube, Gauge	X				






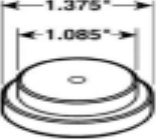 
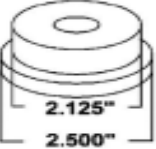 


 
2017 Ford and Lincoln New Dealer Kits' Contents

205-1016	Installer, Differential Bearing	X				
205-1018	Tube, Installation	X				
205-1020	Installer, Installer, Pinion Seal	X				
205-1023	Installer, Inner Pinion Bearing Cup	X				
205-1024	Installer, Outer Pinion Bearing Cup	X				
205-1025	Tube, Gauge	X				
205-1026	Pinion, Dummy Pinion Bearing	X				
205-1027	Adjuster, Differential Bearing Adjustment	X				
205-1028	Installer, Inner Pinion Bearing Cup	X				
205-1029	Installer, Inner wheel end bearing cup	X				

2017 Ford and Lincoln New Dealer Kits' Contents

205-1030	Installer, Outer wheel end bearing cup	X				
205-1031	Installer, Pinion Seal	X				
205-1032	Protector, Pinion Thread	X				
205-1033	Installer, Companion Flange	X				
205-1034	Installer, Differential Bearing	X				
205-1035	Pinion, Dummy Pinion Bearing	X				
205-1036	Gauge, Tube	X				
205-1037	Installer, Pinion Bearing Cup	X				
205-1038	Installer, Pinion Bearing Head	X				
205-105	Adapter, Aligning	X		X		



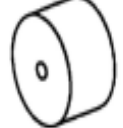 






2017 Ford and Lincoln New Dealer Kits' Contents

205-109	Screw	X		X		
205-110	Block, Gauge	X		X		
205-111	Handle	X		X		
205-115A	Installer, Drive Pinion Seal	X				
205-116	Remover, Differential Bearing	X		X		
205-117	Plate, Step	X		X		
205-118	Installer, Differential Bearing Cup	X				
205-123	Installer, Axle Shaft Oil Seal	X		X		
205-124	Installer, Axle Shaft Bearing	X		X		
205-125	Disc, Gauge	X				

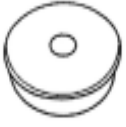2017 Ford and Lincoln New Dealer Kits' Contents

205-126	Fixture, Drive Pinion Flange Holding	X		X		
205-129	Disc, Gauge	X		X		
205-130	Tube, Gauge	X		X		
205-133	Installer, Drive Pinion Seal	X		X		
205-135	Gauge, Differential Clutch	X		X		
205-138	Installer, Drive Pinion Bearing Cup	X		X		
205-140	Installer, Drive Pinion Bearing Cup	X		X		
205-142	Installer, Differential Bearing Cone	X		X		
205-147	Installer, Wheel Hub Bearing Cup	X		X		
205-149	Installer, Spindle Bearing	X		X		



 






 
2017 Ford and Lincoln New Dealer Kits' Contents

205-150	Installer, Spindle Bearing	X		X		
205-153	Adapter for 303-224 (Handle)	X		X		
205-154	Installer, Rear Axle Bearing	X				
205-155	Installer, Rear Axle Oil Seal	X				
205-159	Adapter for 205-S156 Pinion Depth Gauge	X		X		
205-160	Adapter for 205-S156 Pinion Depth Gauge	X		X		
205-193	Remover, Axle Bearing	X				
205-194	Installer, Axle Bearing	X				
205-199	Installer, Spindle/Axle Shaft	X		X		
205-206	Installer, Differential Bearing	X				

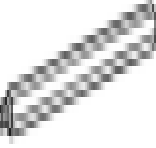2017 Ford and Lincoln New Dealer Kits' Contents

205-208	Installer, Drive Pinion Oil Seal	X		X		
205-219	Remover, Axle Bearing	X		X		
205-220	Installer, Differential Shim	X		X		
205-224	Remover, Axle Bearing	X				
205-225	Installer, Axle Bearing Cup	X		X		
205-226	Gauge/Aligner, Drive Pinion Depth	X		X		
205-228	Installer, Differential Shim	X		X		
205-229	Protector, Drive Pinion Thread	X		X		
205-231	Installer, Drive Pinion Bearing	X				
205-232	Installer, Drive Pinion Bearing	X				



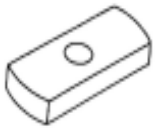




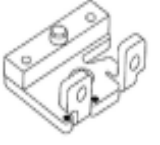 
2017 Ford and Lincoln New Dealer Kits' Contents

205-233	Installer, Drive Pinion Flange	X		X		
205-241	Remover, Halfshaft	X		X		
205-243	Remover, Halfshaft	X		X		
205-253	Remover, Wheel Knuckle	X				
205-256	Installer, Front Wheel Hub Seal	X		X		
205-259	Installer, Axle Oil Seal	X				
205-270	Gauge, Differential Clutch	X		X		
205-275	Remover, Rear Wheel Hub Bearing Cup	X				
205-276	Installer, Front Wheel Hub Seal	X		X		
205-277	Remover, Rear Wheel Hub Bearing Cup	X				







2017 Ford and Lincoln New Dealer Kits' Contents

205-278	Installer, Rear Wheel Hub Bearing Cup	X				
205-280	Gauge/Aligner, Drive Pinion Depth	X				
205-281	Gauge/Aligner, Drive Pinion (Handle)	X				
205-282	Socket, Wheel Hub Nut	X				
205-283	Remover, Rear Wheel Hub Bearing Cup	X				
205-285	Installer, Drive Pinion Flange	X				
205-289	Installer, Wheel Hub Dust Seal	X		X		
205-290	Remover, Halfshaft (Plate)	X		X		
205-319	Gauge, Drive Pinion Flange Runout	X		X		
205-320	Plate, Driveshaft Clamp	X		X		

 









2017 Ford and Lincoln New Dealer Kits' Contents

205-323	Gauge, Drive Pinion Runout	X				
205-325	Gauge, Drive Pinion Flange (Pin)	X				
205-326	Gauge, Drive Pinion Flange (Pin)	X				
205-335	Spreader, Differential Housing (Plate)	X		X		
205-336	Tube, Drive Pinion Gauge	X		X		
205-343	Installer, Constant Velocity Joint Boot Clamp	X		X		
205-346	Installer, Front Axle Bushing	X		X		
205-350	Installer, Front Axle Seal	X		X		
205-353	Installer, Front Wheel Spindle Oil Seal	X				
205-368	Spreader, Adapter For Differential Housing	X		X		











2017 Ford and Lincoln New Dealer Kits' Contents

205-371	Remover, Front Axle Mounting Bushing Cup	X		X		
205-374	Installer, Front Axle Mounting Bushing Drawbolt	X		X		
205-376	Remover, Front Axle Mounting Bushing	X		X		
205-377	Tube, Drive Pinion Gauge	X		X		
205-378	Rotator, Differential	X		X		
205-381	Installer, Rear Axle Oil Seal	X				
205-382	Installer, Rear Axle Differential Bearing	X				
205-383	Gauge/Aligner, Drive Pinion Depth	X		X		
205-384	Gauge, Differential (Traction Lock)	X		X		
205-385	Gauge, Differential (Traction Lock)	X		X		

 









2017 Ford and Lincoln New Dealer Kits' Contents

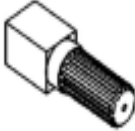205-386	Gauge, Differential (Traction Lock)	X		X		
205-387	Installer, Rear Axle Bearing Cup	X		X		
205-389	Gauge, Differential (Traction Lock)	X		X		
205-390	Installer, Rear Axle Oil Seal	X				
205-393	Installer, Drive Pinion Flange	X				
205-420	Remover, Wheel Hub Outer Bearing Cup (10 1/2 in.)	X				
205-421	Remover, Wheel Hub Inner Bearing Cup (10 1/2 in.)	X				
205-422	Installer, Wheel Hub Oil Seal (10 1/2 in.)	X				
205-423	Gauge, Drive Pinion Depth (10 1/2 in.)	X				
205-425	Installer, Differential Carrier Seal LH	X				








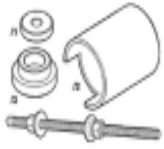 


2017 Ford and Lincoln New Dealer Kits' Contents

205-426	Installer, Differential Carrier Seal RH	X				
205-427	Installer, LH Differential Carrier Oil Seal (Dana 60)	X				
205-428	Bar, Oil Seal Spreader	X				
205-430	Collets, Differential Carrier Bearing	X				
205-431	Ring, Differential Carrier Bearing	X				
205-432	Step Plate, Differential Carrier Bearing	X				
205-433	Remover, Yoke	X				
205-435	Installer, Differential Yoke	X				
205-437	Installer, Drive Nut, Yoke	X				
205-445	Installer, Wheel Hub Inner Oil Seal	X				


2017 Ford and Lincoln New Dealer Kits' Contents

205-447	Gauge, Differential Clutch Preload	X				
205-460	Protector, Drive Pinion Thread	X		X		
205-461	Protector, Differential Oil Seal (pair)	X		X		
205-475	Remover, Halfshaft	X				
205-478	Holding Tool, Drive Pinion Flange	X				
205-479	Installer, Drive Pinion Flange	X				
205-480	Installer, Drive Pinion Inner Bearing Cup	X		X		
205-486	Installer, Drive Pinion Bearing Cup	X				
205-487	Protector, Drive Pinion Thread	X				
205-488	Installer, Drive Pinion Bearing	X		X		



 




 
 

2017 Ford and Lincoln New Dealer Kits' Contents

205-489	Remover, Drive Pinion Inner Bearing	X				
205-495	Installer, Transmission Output Shaft Flange	X				
205-504	Installer, Halfshaft Pilot Bearing	X		X		
205-510	Receiving Cup, Axle Bushing	X				
205-527	Remover/Installer, Front Differential Housing Bushing	X		X		
205-529	Remover, Halfshaft	X		X		
205-796	Plug, ABS Sensor Vacuum Test	X				
205-813	Remover/Installer, Rear Drive Unit Bushing	X		X		
205-816	Protector, Differential Oil Seal (pair)	X		X		
205-826	Test Tool, Knuckle Seal Vacuum	X				


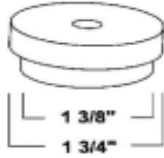 

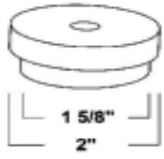 

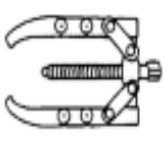 


 
 
2017 Ford and Lincoln New Dealer Kits' Contents

205-827	Test Tool, Vacuum Hub	X				
205-828	Stand, Hub Bearing	X				
205-829	Stand, Hub Vacuum Test	X				
205-830	Installer, Wheel Knuckle Seal	X				
205-831	Installer, Wheel Knuckle Seal	X				
205-832	Remover, Halfshaft	X		X		
205-834	Installer, Drive Pinion Bearing	X				
205-852	Installer, Inner Pinion Bearing Cup	X		X		
205-882	Installer, PTU Linkshaft Seal Dust Shield	X		X		
205-883	Installer, PTU Linkshaft Seal	X		X		

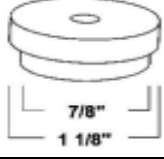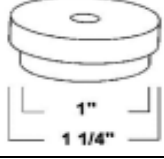




 


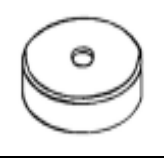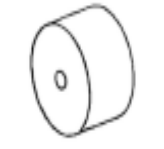
 
2017 Ford and Lincoln New Dealer Kits' Contents

205-907	Handle, 32 in. Driver	X		X		
205-935	Installer, Pinion Seal	X				
205-936	Pinion, Flange Installer	X				
205-937	Adapter, Pinion Aligning	X		X		
205-990	Installer, Axle Seal	X		X		
205-D002	Remover, Drive Pinion Bearing Cone		X		X	
205-D012	Plate, Step		X			
205-D013	Plate, Step		X			
205-D014	Plate, Step		X			
205-D015	Plate, Step		X		X	

 





 

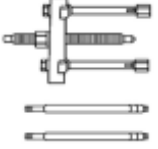 

2017 Ford and Lincoln New Dealer Kits' Contents

205-D016	Plate, Step		X		X	
205-D017	Plate, Step		X			
205-D018	Plate, Step		X			
205-D019	Plate, Step		X		X	
205-D020	Plate, Step		X			
205-D026	2 Jaw Puller		X			
205-D027	2 or 3 Jaw Puller		X			
205-D028	Adapter, Alignment		X			
205-D030	Disc, Gauge, 1.2692 in.		X			
205-D031	Adapter, Alignment, 1.740 in.		X			


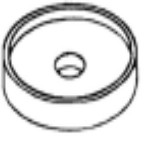 

 


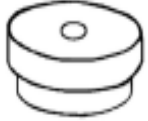



2017 Ford and Lincoln New Dealer Kits' Contents

205-D033	Tube, Gauge, 3.8135 in.		X			
205-D035	Remover, 2 Jaw Puller		X			
205-D036	Puller, Drive Pinion/Differential Carrier		X			
205-D037	Disc, Gauge		X			
205-D038	Tube, Gauge		X			
205-D044	Installer, Differential Carrier Bearing		X		X	
205-D047	Set, Dummy Bearing		X			
205-D048	Set, Dummy Bearing		X			
205-D055	Handle		X		X	
205-D060	Preload Tool, Limited Slip		X			











2017 Ford and Lincoln New Dealer Kits' Contents

205-D061	Plate, Step		X		X	
205-D062	Handle, Rotating		X			
205-D064	Puller, Bearing		X		X	
205-D067	Pliers, Boot Clamp		X		X	
205-D070	Remover, Front Wheel Hub		X		X	
205-D072	2 Jaw Puller		X		X	
205-DS004	Protector Set, Shaft		X		X	
205-DS011	Set, Step Plate Adapter		X		X	
205-DS023	Push/Puller Set		X		X	
206-026	Adapter for 206-010	X		X		

 









2017 Ford and Lincoln New Dealer Kits' Contents

206-033	Remover/Installer, Wheel Speed Sensor Ring	X				
206-034	Installer, Wheel Speed Sensor Ring	X		X		
206-040	Installer, Parking Brake Bearing	X		X		
206-041	Installer, Wheel Speed Sensor Ring	X				
206-054	Installer, Wheel Speed Sensor Ring	X				
206-060	Installer, Wheel Speed Sensor Ring	X				
206-084	Installer, Wheel Speed Sensor Ring	X		X		
206-086	Gauge, Parking Brake Cable Adjustment	X				
206-D002	Gauge, Brake Adjustment		X		X	
206-D122	Adapter, Brake System		X			











2017 Ford and Lincoln New Dealer Kits' Contents

211-001	Remover, Tie-Rod End	X				
211-003	Remover, Steering Arm	X		X		
211-006	Remover/Installer, Steering Gear Oil Seal	X				
211-007	Remover/Installer, Steering Gear Bearing	X				
211-008	Installer, Steering Gear Bushing	X				
211-009	Installer, Power Steering Pump Pulley	X				
211-012	Installer, Worm Bearing Locknut	X				
211-014	Remover, Steering Wheel	X				
211-016	Remover, Power Steering Pump Pulley	X		X		
211-023	C-Frame and Screw	X		X		











2017 Ford and Lincoln New Dealer Kits' Contents

211-044	Installer, Sector Shaft Seal	X				
211-061	Remover, Roll Pin	X		X		
211-105	Remover, Tie-Rod End	X		X		
211-185	Installer, Power Steering Pump Pulley	X		X		
211-265	Cap, Power Steering Evacuation	X		X		
211-327	Fill Tool, Power Steering Vacuum	X		X		
211-D009	Adapter, Power Steering Analyzer			X		
211-D019	Adapters, Power Steering			X		
211-D027	Installer Set, Teflon Seal			X	X	
211-S060	Pin Set, Roll			X		




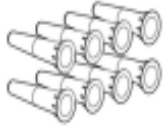 
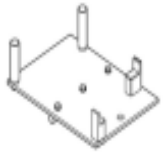 





2017 Ford and Lincoln New Dealer Kits' Contents

303-004	Gauge, Valve Guide Clearance	X		X		
303-009	Remover, Crankshaft Vibration Damper	X		X		
303-050	Bracket, Engine Lifting	X		X		
303-088	Gauge, Oil Pressure	X		X		
303-096	Installer, Camshaft Front Oil Seal	X		X		
303-101	Remover, Crankshaft Vibration Damper	X				
303-102	Installer, Crankshaft Vibration Damper	X		X		
303-103	Holding Tool, Flywheel	X		X		
303-1039	Compressor, Valve Spring	X		X		
303-1040	Alignment Pins, Cylinder Head	X		X		







 

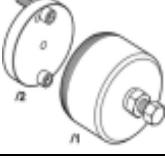 

2017 Ford and Lincoln New Dealer Kits' Contents

303-1046	Locking Tool, Cam Phaser	X		X		
303-107	Remover, Crankshaft Front Oil Seal	X		X		
303-1097	Locking Tool, Variable Camshaft Timing Oil Control Unit	X				
303-1140	Bracket, Engine Lifting	X		X		
303-1175	Locking Tool, Timing Chain	X		X		
303-1245	Lift Eye, Engine	X		X		
303-1246	Bar, Engine Spreader	X		X		
303-1247	Remover/Installer, VCT Spark Plug Tube Seal	X		X		
303-1248	Holding Tools, Camshaft	X		X		
303-1249	Compressor, Valve Spring	X		X		







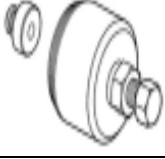

 

2017 Ford and Lincoln New Dealer Kits' Contents

303-1250	Installer, Rear Main Seal	X		X		
303-1251	Installer, Front Seal	X		X		
303-1252	Remover/Installer, Stretchy Belt	X		X		
303-1261	Cups, Injector	X				
303-1295	Fixture, Oil Pan	X		X		
303-1310	Holding Wrench, Crankshaft	X				
303-1317	Locking Tool, Fuel Injection Pump Sprocket	X				
303-1416	Tool, Crank Damper Holding	X		X		
303-1417	Tool, Crank Sensor Alignment	X		X		
303-1418	Compressor, Valve Spring	X		X		

 




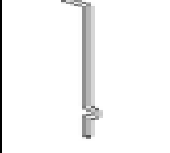 


 
2017 Ford and Lincoln New Dealer Kits' Contents

303-1419	Remover, 3.5L / 3.7L Stretchy Belt	X		X		
303-1454	Bar, Engine Spreader	X		X		
303-1502	Eye, Lifting	X				
303-1507	Brackets, Support	X				
303-1508	Installer, Front Crank Seal	X				
303-1509	Installer, Front Crank Seal	X				
303-1510	Remover, Front Crank Seal	X				
303-1511	Tester, EGR Cooler Pressure	X				
303-1513	Remover, Rear Crank Seal	X				
303-1514	Installer, Rear Crank Seal	X				

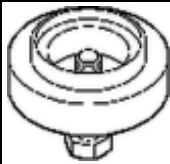 
2017 Ford and Lincoln New Dealer Kits' Contents

303-1515	Adapter, Compression Test	X				
303-1516	Compressor, Valve Spring	X				
303-1517	Adapter, Camshaft Remover/Installer	X				
303-1518	Bracket, Engine Removal	X				
303-1521	Alignment Tool, Crankshaft Position Sensor	X		X		
303-1525	Flusher, Engine	X				
303-1528	Remover/Installer, Water Tube Seal	X		X		
303-1529	Lift Eye, Engine	X		X		
303-1530	Tool, Chain Tensioner Hold Down	X		X		
303-1531	Installer, Front Crank Seal and Damper	X		X		

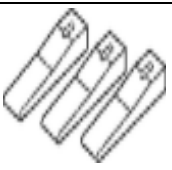

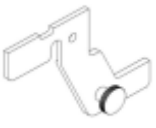



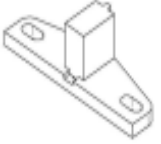



2017 Ford and Lincoln New Dealer Kits' Contents

303-1532	Installer, Camshaft Seal	X				
303-1550	Alignment Tool, Crankshaft Vibration Damper	X				
303-1552	Alignment Tool, Camshaft	X				
303-1554	Bar, Engine Support	X		X		
303-1554-05	Adapter for 303-1554	X				
303-1556	Locking Tool, Timing Belt	X				
303-1561	Holding Wrench, Pulley	X				
303-1562	Timing Tool, Crankshaft	X				
303-1565	Alignment Tool, Camshaft	X		X		
303-1567	Sizer, Teflon Seal	X		X		

 





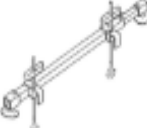 
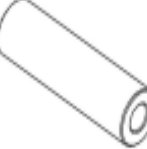 


2017 Ford and Lincoln New Dealer Kits' Contents

303-1587	Timing Tool, Crankshaft	X				
303-1602	Locking Tool, Crankshaft	X				
303-1603	Installer, Front Cover Seal	X				
303-1604	Timing Peg, Crankshaft TDC	X				
303-1605	Alignment Tool, Camshaft	X				
303-1606	Locking Tool, Variable Camshaft Timing	X				
303-1611	Multiplier, Torque	X				
303-1611-01	Adapter for 303-1611	X				
303-1611-02	Adapter for 303-1611, Torque Multiplier	X				
303-1633	Remover, Roller Rocker Follower	X		X		









 

2017 Ford and Lincoln New Dealer Kits' Contents

303-1633-01	Remover, Roller Rocker Follower	X				
303-1634	Fixture, Engine Lift Eyes	X		X		
303-1638	Socket, Block Heater	X		X		
303-1654	Lift Eyes	X				
303-1655	Tool, Camshaft Holding	X				
303-175	Installer, Crankshaft Vibration Damper	X				
303-178	Installer, Crankshaft Rear Main Oil Seal	X		X		
303-214	Wrench, Fan Clutch Nut	X				
303-239	Holding Wrench, Fan Pulley	X				
303-240	Wrench, Fan Clutch Nut	X				

2017 Ford and Lincoln New Dealer Kits' Contents

303-249	Remover, Crankshaft Timing Pulley	X		X		
303-249-01	Adapter for 303-249	X				
303-290-01	Adapter for 303-290A	X				
303-290-05A	Adapter for 303-290A	X		X		
303-290A-03A	Adapter for 303-290A (Support Leg)	X				
303-290A-12	Adapter For 303-290A (Support Hook)	X				
303-290B	Support Bar, Engine	X				
303-290B-18	Adapter for 303-290B	X				
303-290B-19	Adapter for 303-290B	X		X		
303-293	Remover, Crankshaft Seal	X				

2017 Ford and Lincoln New Dealer Kits' Contents

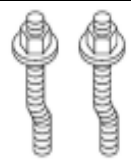303-300	Set, Valve Spring Compressor	X		X		
303-328	Replacer, Rear Seal	X		X		
303-335	Installer, Front Cover Oil Seal	X		X		
303-350	Compressor, Valve Spring	X		X		
303-376B	Alignment Plate, Camshaft	X				
303-380	Aligner, Camshaft	X				
303-382	Compressor Spacer, Valve Spring	X		X		
303-383	Installer, Valve Stem Oil Seal	X		X		
303-384	Installer Bolts, Crankshaft Rear Main Oil Seal	X		X		
303-393-02	Adapter For 303-393	X				








2017 Ford and Lincoln New Dealer Kits' Contents

303-393A	Locking Tool, Flywheel	X				
303-409	Remover, Crankshaft Seal	X		X		
303-413	Aligner, Camshaft Pulley	X				
303-420	Installer, Crankshaft Front Oil Seal	X		X		
303-442	Installer, Connecting Rod	X		X		
303-446	Holding Tool, Camshaft	X				
303-448	Holding Tool, Crankshaft	X		X		
303-452	Compressor, Valve Spring	X				
303-456	Plate, Water Pump Pulley	X		X		
303-457	Protector, Water Pump Shaft	X		X		






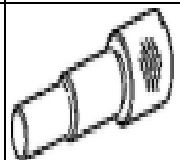 




2017 Ford and Lincoln New Dealer Kits' Contents

303-458	Installer, Camshaft Pulley	X		X		
303-459	Spacer, Water Pump Pulley	X		X		
303-463	Protector, Camshaft Oil Seal	X		X		
303-464	Installer, Camshaft Oil Seal	X		X		
303-465	Tool, Camshaft Align Timing	X		X		
303-468	Remover, Valve Stem Oil Seal	X		X		
303-470	Installer, Valve Stem Oil Seal	X		X		
303-472	Compressor, Valve Spring	X		X		
303-473	Compressor, Valve Spring	X		X		
303-476	Socket, Exhaust Gas Oxygen Sensor	X		X		




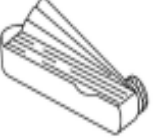 

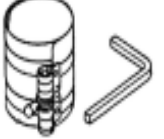 




2017 Ford and Lincoln New Dealer Kits' Contents

303-478	Holding Wrench, Fan Clutch Pulley	X				
303-507	Timing Peg, Crankshaft TDC	X		X		
303-514	Remover, Crankshaft Rear Oil Slinger	X		X		
303-516	Installer, Crankshaft Rear Oil Seal	X		X		
303-517	Installer, Crankshaft Rear Oil Slinger	X		X		
303-518	Installer, Crankshaft Rear Oil Seal	X		X		
303-519	Remover, Crankshaft Rear Oil Seal	X		X		
303-557	Aligner, Camshaft Position	X		X		
303-567	Compressor, Valve Spring	X		X		
303-572	Remover/Installer, Cylinder Head	X		X		



 







2017 Ford and Lincoln New Dealer Kits' Contents

303-635	Installer, Crankshaft Front Oil Seal	X		X		
303-639	Support Bracket, Engine	X		X		
303-679A	Remover/Installer, Engine Front Cover Inspection Plate	X				
303-682	Aligner, Engine Front Cover	X				
303-705	Aligner, Oil Pump	X				
303-748	Locking Tool, Crankshaft	X				
303-D011	Pin, Actuator, (Dia 3/16 in.)		X		X	
303-D012	Pin, Actuator		X			
303-D019	Collet, 3/4 in. To 7/8 in.		X		X	
303-D020	Collet, 7/8 in. to 1 in.		X		X	

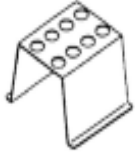







 
 
2017 Ford and Lincoln New Dealer Kits' Contents

303-D021	Collet, 1 in. to 1 1/4 in.		X			
303-D022	Collet, 1 1/4 in. to 1 1/2 in.		X			
303-D026	Micrometer, Depth		X			
303-D027	Feeler Gauge Set		X		X	
303-D030	Lifting Eyes		X			
303-D032	Compressor, Piston Ring		X		X	
303-D033	Scraper, Piston Ring Groove		X		X	
303-D055	Wrench, Strap		X		X	
303-D075	Micrometer, Depth		X		X	
303-D087	Lifting Bracket, Engine		X		X	





 


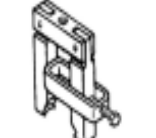


2017 Ford and Lincoln New Dealer Kits' Contents

303-D089	Bar, Spreader		X		X	
303-D099	Lifting Bracket, Engine		X			
303-D114	Holding Rack, Fuel Injector		X			
303-D121	Puller, General Purpose		X		X	
303-DS086	Lifting Bracket Set, Engine		X		X	
303-F047	Lifting Bracket, Engine		X		X	
303-F070	Support Bar, Engine		X		X	
303-F072	Support Bar, Engine		X		X	
303-F694	Adapter, Modular Engine		X			
307-001	Remover, Bushing	X				





 



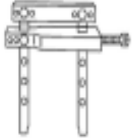 

2017 Ford and Lincoln New Dealer Kits' Contents

307-002	Installer, Shift Shaft Fluid Seal	X				
307-003	Holding Fixture, Transmission	X		X		
307-004	Gauge, Transmission Fluid Pressure	X		X		
307-005	Slide Hammer	X		X		
307-014	Installer, Front Pump Fluid Seal	X		X		
307-015	Compressor, Clutch Spring	X		X		
307-016	Remover, Front Pump Bushing	X				
307-020	Protector, Piston Seal	X		X		
307-048	Remover, Transmission Fluid Seal	X		X		
307-050	Installer, Shift Shaft Seal	X		X		









 

2017 Ford and Lincoln New Dealer Kits' Contents

307-072	Gauge, Shim Selection	X		X		
307-073	Installer, Servo Piston	X		X		
307-078	Protector, Piston Seal	X		X		
307-080	Protector, Piston Seal	X		X		
307-091	Handle, Torque Converter	X		X		
307-096	Compressor, Clutch Spring	X		X		
307-126	Test Plate Screw Set, Transmission	X		X		
307-162	Gauge, Servo Rod	X				
307-163	Remover, Stator Case Bearing	X		X		
307-181	Installer, Transaxle Bearing Cone	X		X		

 

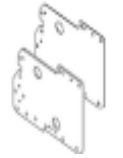 







2017 Ford and Lincoln New Dealer Kits' Contents

307-209	Compressor, Spring Washer	X		X		
307-221	Remover, Transmission Fluid Pump	X		X		
307-222	Aligner, Transmission Fluid Pump	X				
307-246	Air Test Plate, Transmission	X		X		
307-251	Remover/Installer, Servo Piston	X		X		
307-256	Installer, Differential Fluid Seal	X				
307-299	Alignment Pins, Valve Body	X				
307-300	Gauge Bar, Shim Selection	X		X		
307-309	Remover, Torque Converter Seal	X		X		
307-318	Remover, Stator Bearing	X		X		

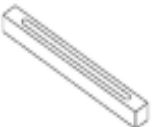









2017 Ford and Lincoln New Dealer Kits' Contents

307-343	Pliers, Retaining Ring	X		X		
307-346	Retainer, Torque Converter	X		X		
307-351	Alignment Gauge, Transmission Range (TR) Sensor	X		X		
307-375	Installer, Needle Bearing	X				
307-376	Installer, Fluid Filler Tube	X				
307-384	Fixture Handle, Coast Clutch	X				
307-385	Fixture Body, Coast Clutch	X				
307-387	Protector, Clutch Piston Seal	X				
307-397	Remover, Transmission Fluid Pump	X		X		
307-399	Alignment Pins, Transmission Fluid Pump	X		X		

 
 




 



2017 Ford and Lincoln New Dealer Kits' Contents

307-400	Bar, Gauge	X				
307-410	Mounting Bracket, Transmission	X				
307-412	Plate, Transmission Air Test	X				
307-413	Holding Tool, Final Drive Input Gear	X				
307-414	Socket, Final Drive Input Nut	X				
307-415	Alignment Gauge, Transmission Range (TR) Sensor	X				
307-416	Adjustment Bolt, Transmission Band	X				
307-417	Gauge, Differential/Transfer Gear Bearing Shim	X				
307-418	Installer, Transfer Gear Bearing Cup	X				
307-420	Holding Fixture, Final Drive	X				

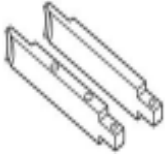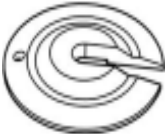

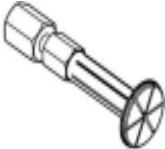


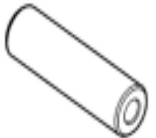 


 
2017 Ford and Lincoln New Dealer Kits' Contents

307-421	Leak Tester, Torque Converter	X		X		
307-422	Protector, Transmission Direct Clutch Outer Fluid Seal	X		X		
307-424	Protector, Transmission Reverse Clutch Outer Fluid Seal	X		X		
307-425	Protector, Transmission Reverse Clutch Inner Fluid Seal	X		X		
307-428A	Installer, RH Halfshaft Seal	X		X		
307-429	Remover, RH Halfshaft Fluid Seal	X		X		
307-436	Installer, Transmission Forward Clutch Assembly	X				
307-436-02	Adapter for 307-436	X				
307-441	Disconnect Tool, Transmission Cooler Line	X				
307-453	Installer, Transmission Extension Housing Seal	X				







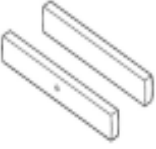



2017 Ford and Lincoln New Dealer Kits' Contents

307-454	Remover, Transmission Extension Housing Seal	X				
307-455	Aligner, Clutch Spring Compressor	X				
307-456	Aligner, Valve Body	X				
307-457	Air Test Plate, Transmission	X				
307-458	Socket, Output Shaft Locknut	X				
307-459	Disconnect Tool, Transmission Cooler Line	X				
307-460	Remover, Output Shaft Seal/Housing	X				
307-461	Installer, Output Shaft Seal/Housing	X				
307-462A	Installer, Output Shaft Seal	X				
307-466	Alignment Pins, Transmission Fluid Pump	X				





 


 


2017 Ford and Lincoln New Dealer Kits' Contents

307-516	Installer, Teflon Seal	X		X		
307-523	Remover, Output Flange	X		X		
307-525	Compressor, Clutch Spring	X		X		
307-534	End Play Gauge, Transmission	X		X		
307-541	Installer, Transfer Gear Bearing	X		X		
307-548	Installer, Fluid Pump Seal	X		X		
307-549	Installer, Shift Shaft Fluid Seal	X		X		
307-552	Compressor, Clutch Spring	X		X		
307-553	Remover, Transmission Fluid Pump	X		X		
307-554	Gauge, D-Clutch Measurement	X		X		

2017 Ford and Lincoln New Dealer Kits' Contents

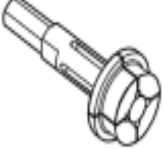307-555	End Play Gauge, Clutch	X		X		
307-556	Installer, Fluid Pump Seal	X		X		
307-557	Installer, Ball Bearing	X				
307-559	Installer, Shifter Fluid Seal	X		X		
307-562	Remover, Needle Bearing	X		X		
307-566	Retainer, Torque Converter	X		X		
307-567A	Installer, Axle Seal	X		X		
307-568A	Installer, Axle Seal	X		X		
307-569	Tool, TOC Line Disconnect, 1/2 in.	X		X		
307-570	Tube, Transmission Fill	X		X		

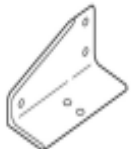









2017 Ford and Lincoln New Dealer Kits' Contents

307-572	Installer, Axle Seal	X				
307-574	Compressor, Forward Clutch Spring	X		X		
307-575	Installer, Converter Seal	X		X		
307-576	Installer, Bearing Cup	X		X		
307-577	Remover, Transfer Gear Bearing Race	X		X		
307-578	Input Shaft Support Seal Installer (Back Plate, Multiple rings)	X		X		
307-579	Installer, Support Solid Seal, Single Seal	X		X		
307-580	Fixture, Holding	X		X		
307-581	Installer, Manual Lever Seal	X		X		
307-582A	Installer, Cover Axle Seal	X		X		






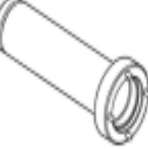 


 
2017 Ford and Lincoln New Dealer Kits' Contents

307-583	Installer, Oil Dam Seal	X		X		
307-584	Compressor, 2-6 Spring	X		X		
307-585	Installer, Support Seal	X		X		
307-586	Remover, Differential Bearing Cup	X		X		
307-587	Installer and Guide, Differential Bearing	X		X		
307-588	Set, Reverse Clutch Piston and Retaining Ring	X		X		
307-589	Set, Overdrive Clutch and Balance Piston Service	X		X		
307-591	Shim Gauge, Differential/Transfer Gear Bearing	X		X		
307-592	Installer, Manual Lever Retaining Pin	X		X		
307-593	Installer, Axle Seal	X		X		

 

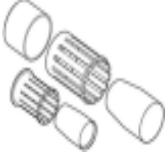 

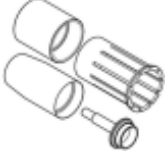 

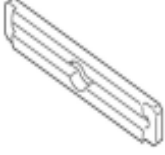 



2017 Ford and Lincoln New Dealer Kits' Contents

307-625	Fixture, Bench Mounting	X		X		
307-626	Installer, Differential Seal	X		X		
307-627A	Installer, Converter Seal	X		X		
307-628	Protector, Low Reverse Piston Seal	X		X		
307-629	Protector, Low Reverse / 1-2-3-4 Piston Seal	X		X		
307-630	Compressor, Center Support Piston Spring	X		X		
307-632	Protector, 2-6 Piston Seal	X		X		
307-633	Compressor, 2-6 Piston Return Spring	X		X		
307-635	Protector, Turbine Shaft Seal	X		X		
307-636	Alignment Pins, Valve Body	X		X		

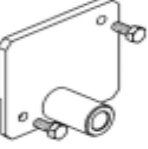 

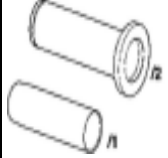 
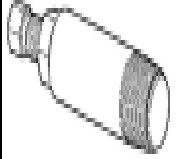 
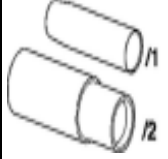 


 
 
 
2017 Ford and Lincoln New Dealer Kits' Contents

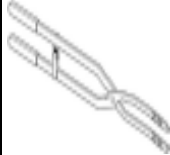307-637A	Installer, 6R80 Rear Seal 4X4	X		X		
307-638A	Installer, 6R80 Rear Seal 4X2	X		X		
307-639	Remover/Installer, 6R80 Rear Bearing	X		X		
307-647	Installer, Output Shaft Bearing	X		X		
307-648	Remover/Installer, Rear Bearing	X				
307-649	Socket, Output Shaft Nut	X				
307-650	Installer, Output Shaft Seal	X				
307-651	Bracket, Pump Remover/Installer	X				
307-652	Plate, C-Clutch Air	X				
307-653	Sizer, Input Shaft Teflon Seal	X				

2017 Ford and Lincoln New Dealer Kits' Contents

307-654	Pliers, Snap Ring	X				
307-655	Installer, Center Support Bearing	X				
307-657	Installer, Pump Seal - Non-PTO	X				
307-658	Compressor, C Clutch Return Spring	X				
307-659	Installer/Sizer, Pump Seal PTO	X				
307-660	Installer, Front Pump Seal	X				
307-661	Gauge, End Play	X				
307-662	Gauge, Clutch Pack Endplay	X				
307-664	Installer, Case Bushing	X		X		
307-665	Installer, Differential Seals, LH and RH (Two sided Tool)	X		X		



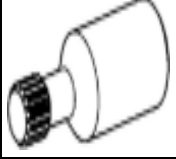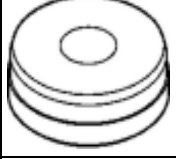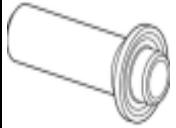 
2017 Ford and Lincoln New Dealer Kits' Contents

307-670	Remover/Installer, Shift Lever Seal	X				
307-671	Installer, Axle Seal	X				
307-672	Installer, Input Guide and Seal	X		X		
307-673	Remover, Outer Input Shaft Seal	X				
307-674	Installer, Outer Input Seal	X				
307-675	Fixture, Clutch Remover/Installer	X				
307-676	Tool, Clutch 1 and 2 Reset	X				
307-677	Socket, Actuator Reset	X				
307-678	Remover, Bearing cone	X				
307-679	Installer, Countershaft Needle Bearing	X				

2017 Ford and Lincoln New Dealer Kits' Contents

307-680	Table, Assembly (DPS6)	X				
307-681	Preload Tool, Differential Bearing	X				
307-689	Installer, Bearing Cup	X		X		
307-691	Tester, Torque Converter Leak	X		X		
307-692	Tool, Transfer Gear Preload	X		X		
307-693	Installer, Transfer Gear Bearing Cup	X		X		
307-694	Installer, Manual Lever Seal	X		X		
307-695	Tool, Quick Disconnect, 1/2 Inches	X				
307-696	Remover, TRS Retaining Pin	X		X		
307-708	Installer, Lube Tube	X				



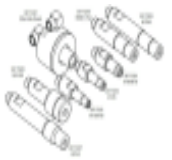


 
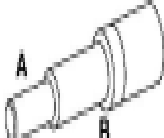 

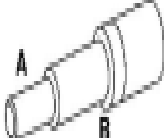 

2017 Ford and Lincoln New Dealer Kits' Contents

307-713	Installer, Roller Bearing	X		X		
307-714	Installer, Needle Bearing	X		X		
307-715	Installer, Output Seal (4X2)	X		X		
307-716	Installer, Teflon Seal	X		X		
307-717	Remover, Kostal Sleeve	X		X		
307-718	Installer, Axle Seal	X		X		
307-723	Installer, Turbine Seal	X		X		
307-724	Protector, Center Support Seal	X				
307-725	Fixture, Bench Mounting	X				
307-732	Kit, Torque Converter Flush	X		X		






 
 


 
2017 Ford and Lincoln New Dealer Kits' Contents

307-733	Compressor, Clutch Piston	X				
307-734	Aligner, OWC Alignment	X				
307-736	Installer, Pump Drive Gear Bearing	X				
307-737	Installer, Oil Pump Drive Idler Gear	X				
307-738	Installer, R2 Bearing	X				
307-739	Installer, R3 Bearing	X				
307-740	Installer, Sleeve	X				
307-741	Compressor, F Clutch Spring	X				
307-743	Remover, Pump Drive Gear	X				
307-744	Remover, Output Shaft Bearing	X				


 







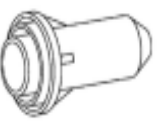 
2017 Ford and Lincoln New Dealer Kits' Contents

307-745	Installer, Park Sleeve Roll Pin	X				
307-746	Remover, Transmission Wiring Harness Connector	X				
307-D004	Banding Tool, Transmission Pump		X			
307-S383	Loading Fixture, Clutch		X			
308-001	Remover, Pilot Bearing	X		X		
308-002	Installer, Transmission Extension Housing Oil Seal	X		X		
308-006	Aligner, Clutch Disc	X		X		
308-017	Installer, Bearing Cup	X				
308-020	Aligner, Clutch Disc	X				
308-021	Gauge, Clutch Housing	X		X		



 
2017 Ford and Lincoln New Dealer Kits' Contents

308-024	Remover/Installer, Bearing Tube	X				
308-025	Remover/Installer, Bearing Tube	X				
308-039	Installer, Halfshaft Seal	X				
308-045	Installer, Transmission Extension Housing Bushing/Seal	X				
308-047	Remover, Bearing Cup	X		X		
308-052	Remover/Installer, Bearing Tube	X				
308-057	Installer, Clutch Housing Oil Seal	X		X		
308-058	Remover, Mainshaft Bearing	X				
308-059	Remover, Mainshaft Bearing	X				
308-060	Installer, Mainshaft Bearing	X		X		

 









2017 Ford and Lincoln New Dealer Kits' Contents

308-061	Installer, Bearing	X				
308-062	Installer, Input Shaft Bearing	X				
308-070	Remover, Transmission Extension Housing Bushing	X		X		
308-082	Remover, Input Shaft Fifth Gear	X				
308-085	Installer, Input Shaft Bearing	X		X		
308-092	Removal Screw, Bearing Tube	X				
308-097	Installer, Oil Seal	X				
308-105	Installer, Pilot Bearing	X		X		
308-112	Installer, Output Drive Flange Seal	X				
308-119	Installer, Halfshaft Seal	X		X		











2017 Ford and Lincoln New Dealer Kits' Contents

308-125	Remover, Transfer Case Bearing	X		X		
308-130	Installer, Shift Rail Needle Bearing	X				
308-153	Installer, Differential Bearing Cup	X				
308-155	Installer, Differential Bearing Cup	X		X		
308-160	Turning Torque Socket, Transmission	X		X		
308-162	Installer, Differential Bearing Cup	X		X		
308-163	Installer, Differential Bearing Cup	X				
308-164	Set, Shim Selection	X		X		
308-165	Rotator, Differential	X		X		
308-169	Installer, Shaft Bearing Cone	X		X		


2017 Ford and Lincoln New Dealer Kits' Contents

308-186	Installer, Input Shaft Oil Seal	X		X		
308-202	Installer, Input Shaft Bearing	X				
308-216	Fixture, Dial Indicator Gauge Holding	X				
308-220	Installer, Input Shaft Oil Seal	X				
308-221	Installer, Shaft Bearing Cup	X		X		
308-224	Socket, Input Shaft	X				
308-225	Installer, Differential Bearing Cup	X				
308-249	Installer, Input Shaft Oil Seal	X		X		
308-250	Installer, Output Shaft Oil Seal	X				
308-256	Remover, Halfshaft	X				






2017 Ford and Lincoln New Dealer Kits' Contents

308-375	Remover, Input Shaft Seal	X		X		
308-391	Installer, Input Shaft Bearing Cup	X		X		
308-399	Installer, Output Shaft Oil Slinger	X				
308-400	Installer, Output Shaft Oil Slinger	X				
308-401	Installer, Output Shaft Rear Bearing	X				
308-402	Installer, Transfer Case Needle Bearing	X				
308-403	Installer, Output Shaft Oil Seal	X				
308-404	Sleeve, Output Shaft Rear Snap Ring	X				
308-405	Sleeve, Output Shaft Front Snap Ring	X				
308-406	Sleeve, Input Shaft Snap Ring	X				

2017 Ford and Lincoln New Dealer Kits' Contents

308-410	Installer, Output Shaft Front Bearing	X		X		
308-411	Installer, Output Shaft Rear Bearing	X				
308-412	Installer, Input Shaft Bearing	X				
308-416	Remover/Installer, Thrust Washer Bearing Cup	X				
308-427	Installer, PTO Shaft Inner/Outer Oil Seal	X		X		
308-428	Remover, PTO Driven Gear Oil Seal	X		X		
308-429	Installer, PTO Driven Gear Oil Seal	X				
308-430	Installer, PTO Drive Gear Outer Oil Seal	X		X		
308-431	Installer, Halfshaft Oil Seal	X		X		
308-579	Installer, Output Shaft Seal	X				

2017 Ford and Lincoln New Dealer Kits' Contents

308-580	Installer, Second Gear Bushing	X				
308-581	Installer, Sixth Gear Bushing	X				
308-582	Installer, Input Shaft Bearing	X				
308-584	Installer, Vent Tube	X				
308-599	Aligner, Clutch	X				
308-777	Remover/Installer, PTU Input Shaft Seal	X		X		
308-800	Installer, Input Seal	X				
308-801	Guide, Input Shaft Snap Ring	X				
308-806	Installer, Front Seal	X				
308-807	Holding Tool, Rear Flange	X				






2017 Ford and Lincoln New Dealer Kits' Contents

308-808	Installer, Rear Flange	X				
308-809	Installer, Syncro Gear Pack	X				
308-810	Remover, Syncro Gear Pack	X				
308-811	Installer, Rear Seal	X				
308-812	Remover, Detent	X				
308-847	Installer, Input Shaft Seal	X				
308-849	Installer, Shift Shaft	X				
308-875	Installer, Inboard Cover Seal	X		X		
308-877	Installer, Pinion Output Seal	X		X		
308-878	Installer, Input Seal	X		X		










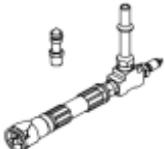 
2017 Ford and Lincoln New Dealer Kits' Contents

308-880	Installer, Driveshaft Seal	X				
308-937	Installer, Input Shaft Seal	X				
308-938	Remover/Installer, Companion Flange Nut	X				
308-941	Installer, Intermediate Shaft Seal	X		X		
308-942	Installer, Slip Yoke Seal	X				
308-943	Installer, Input Seal	X				
308-944	Installer, Front Output Seal	X				
308-945	Installer, Fixed Yoke Output Seal	X				
308-957	Installer, Input Shaft Seal	X				
308-958	Remover, 4th Gear	X				

 









2017 Ford and Lincoln New Dealer Kits' Contents

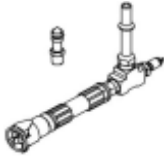308-959	Installer, Output Shaft Seal	X				
308-D002	Aligner, Clutch		X			
310-040	Tool, Fuel Pipe Disconnect, 5/16 in.	X		X		
310-041	Disconnect Tool, Spring Lock Coupling	X				
310-052	Disconnect Tool, Spring Lock Coupling	X				
310-069	Wrench, Fuel Tank Sender Unit	X				
310-102	Hose, Fuel Draining	X		X		
310-123	Locking Ring, Fuel Tank	X		X		
310-159	Adapter, Fuel Line	X				
310-180	Adapter, Fuel Pressure Test	X		X		



 


 


 

2017 Ford and Lincoln New Dealer Kits' Contents

310-205	Brush, Fuel Injector	X		X		
310-206	Remover, Fuel Injector	X		X		
310-206-01	Adapter for 310-206	X				
310-207	Installer, Fuel Injector Seal Assembly	X		X		
310-230	Remover, Fuel Injector	X				
310-230-01	Adapter, Fuel Line Injector Remover	X				
310-250	Disconnect Tool, Fuel Line	X		X		
310-D006	Socket, Fuel Tank Sender Unit			X		
310-D009	Kit, Fuel Pressure Test			X	X	
310-D251	Adapter, Fuel Pressure T, 5/16 in.			X	X	

 

 


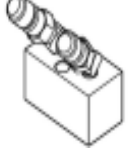

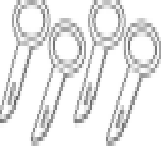2017 Ford and Lincoln New Dealer Kits' Contents

310-D252	Adapter, Fuel Pressure T, 3/8 in.		X			
310-S039	Disconnect Tool, Spring Lock Coupling		X		X	
412-001	Remover, Compressor Pulley	X		X		
412-035	Remover, Damaged Evaporator Core Orifice	X		X		
412-039	Remover, Refrigerant Coupling Spring	X		X		
412-042	Remover, Heater Hose Inlet Tube	X		X		
412-065	Installer, A/C Compressor Coil	X		X		
412-067	Remover, A/C Compressor Field Coil	X		X		
412-078	Installer, A/C Compressor Field Coil	X		X		
412-134	Holding Tool, Compressor Clutch	X		X		

2017 Ford and Lincoln New Dealer Kits' Contents

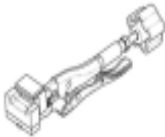412-136	Installer, A/C Clutch	X				
412-137	Protector, A/C Shaft	X				
412-145	Connector, Refrigerant Flushing Equipment	X				
412-150	Holding Tool, A/C Clutch	X				
415-001	Remover, Audio Unit	X				
415-D009	Remover, Audio Unit		X			
416-D002	Kit, Vacuum Pump		X		X	
501-010	Torx Bit, Safety Belt Bolt	X				
501-025	Installer, Rear View Mirror	X		X		
501-039	Remover, Power Point Socket	X		X		

2017 Ford and Lincoln New Dealer Kits' Contents

501-190	Remover, Auto Dimming Rear View Mirror	X		X		
501-191	Installer, Rear View Mirror	X		X		
501-194	Remover, Power Point	X		X		
501-403	Tool, Pretensioner Quick Connect	X		X		
501-411	Mats, 360 Camera Calibration	X		X		
501-D118A	Remover, Mirror		X		X	
502-002	Alignment Pins, Subframe	X		X		
303-569	Aligner, Camshaft	X				