

MAKE	MODEL	YEAR	ENGINE CODE	ENGINE SIZE	FUEL	3147 OIL PRESSURE
Ford	Cougar	98-01	EDBA	2.0LZetec-E SEFI	Petrol	1/4-18NPT
Ford	Cougar	98-01	EDBB	2.0LZetec-E SEFI	Petrol	1/4-18NPT
Ford	Cougar	98-01	EDBC	2.0LZetec-E SEFI	Petrol	1/4-18NPT
Ford	Cougar	98-01	EDBD	2.0LZetec-E SEFI	Petrol	1/4-18NPT
Ford	Cougar	00-01	MABA	2.5 ST 200	Petrol	3/8-18NPT
Ford	Cougar	99-01	MABB	2.5 ST 200	Petrol	3/8-18NPT
Ford	Cougar	98-01	LCBA	2.5LDuratec-VE SEFI	Petrol	3/8-18NPT
Ford	Cougar	98-01	LCBB	2.5LDuratec-VE SEFI	Petrol	3/8-18NPT
Ford	Cougar	98-01	LCBC	2.5LDuratec-VE SEFI	Petrol	3/8-18NPT
Ford	Cougar	98-01	LCBE	2.5LDuratec-VE SEFI	Petrol	3/8-18NPT
Ford	FIESTA IV	95-02	DHA	1.25	Petrol	1/4-18NPT
Ford	FIESTA IV	95-02	DHB	1.25	Petrol	1/4-18NPT
Ford	FIESTA IV	95-02	DHC	1.25	Petrol	1/4-18NPT
Ford	FIESTA IV	95-02	DHD	1.25	Petrol	1/4-18NPT
Ford	FIESTA IV	00-02	DHE	1.25	Petrol	1/4-18NPT
Ford	FIESTA IV	00-02	DHF	1.25	Petrol	1/4-18NPT
Ford	FIESTA IV	00-02	DHG	1.25	Petrol	1/4-18NPT
Ford	FIESTA IV	95-02	JJA	1.3	Petrol	1/4-18NPT
Ford	FIESTA IV	95-02	J4C	1.3	Petrol	1/4-18NPT
Ford	FIESTA IV	95-02	JJC	1.3	Petrol	1/4-18NPT
Ford	FIESTA IV	95-02	JJE	1.3	Petrol	1/4-18NPT
Ford	FIESTA IV	95-02	J4J	1.3	Petrol	1/4-18NPT
Ford	FIESTA IV	95-02	J4L	1.3	Petrol	1/4-18NPT
Ford	FIESTA IV	00-02	JJJ	1.3	Petrol	1/4-18NPT
Ford	FIESTA IV	00-02	JJK	1.3	Petrol	1/4-18NPT
Ford	FIESTA IV	00-02	JJM	1.3	Petrol	1/4-18NPT
Ford	FIESTA IV	00-02	J4Q	1.3	Petrol	1/4-18NPT
Ford	FIESTA IV	95-02	J4R	1.3	Petrol	1/4-18NPT
Ford	FIESTA IV	00-02	J4T	1.3	Petrol	1/4-18NPT
Ford	FIESTA IV	95-00	FHA	1.4	Petrol	1/4-18NPT
Ford	FIESTA IV	95-00	FHE	1.4	Petrol	1/4-18NPT
Ford	FIESTA IV	00-02	L1T	1.6	Petrol	1/4-18NPT
Ford	FIESTA IV	00-02	L1V	1.6	Petrol	1/4-18NPT
Ford	FIESTA IV	96-02	RTJ/RTK	1.8D	Diesel	1/4-18NPT
Ford	FIESTA IV	00-02	C9DC	1.8D Endura -td DI	Diesel	
Ford	FIESTA IV	00-02	RTN/RTQ	1.8DT	Diesel	1/4-18NPT
Ford	FIESTA IV	00-02	RTP	1.8DT	Diesel	1/4-18NPT
Ford	FIESTA V	02-08	FUJA	1.25 16V	Petrol	1/4-18NPT
Ford	FIESTA V	02-08	FUJB	1.25 16V	Petrol	1/4-18NPT
Ford	FIESTA V	02-	F8JA	1.25 16V	Petrol	1/4-18NPT
Ford	FIESTA V	02-	F8JB	1.25 16V	Petrol	1/4-18NPT
Ford	FIESTA V	02-	M7JA	1.25 16V	Petrol	1/4-18NPT
Ford	FIESTA V	02-	M7JB	1.25 16V	Petrol	1/4-18NPT
Ford	FIESTA V	02-03	A9JA	1.3	Petrol	1/4-18NPT

Ford	FIESTA V	02-03	A9JB	1.3	Petrol	1/4-18NPT
Ford	FIESTA V	03-	BAJA	1.3	Petrol	1/4-18NPT
Ford	FIESTA V	02-08	FXJA	1.4 16V	Petrol	1/4-18NPT
Ford	FIESTA V	02-	FXJB	1.4 16V	Petrol	1/4-18NPT
Ford	FIESTA V	02-08	F6JA	1.4TDCI	Diesel	M16X1.5 (9)
Ford	FIESTA V	02-08	F6JB	1.4TDCI	Diesel	M16X1.5 (9)
Ford	FIESTA V	02-08	F6JC	1.4TDCI	Diesel	M16X1.5 (9)
Ford	FIESTA V	02-08	FYJA	1.6	Petrol	1/4-18NPT
Ford	FIESTA V	02-08	FYJB	1.6	Petrol	1/4-18NPT
Ford	FIESTA V	05-08	HHJA	1.6TDCI	Diesel	M16X1.5 (9)
Ford	FIESTA V	05-08	HHJB	1.6TDCI	Diesel	M16X1.5 (9)
Ford	FIESTA V	05-08	N4JB	2.0 16V	Petrol	1/4-18NPT
Ford	FIESTA VI	08-	SNJA	1.25 16V	Petrol	1/4-18NPT
Ford	FIESTA VI	08-	SNJB	1.25 16V	Petrol	1/4-18NPT
Ford	FIESTA VI	08-	STJA	1.25 16V	Petrol	1/4-18NPT
Ford	FIESTA VI	08-	STJB	1.25 16V	Petrol	1/4-18NPT
Ford	FIESTA VI	08-	SPJA	1.4	Petrol	1/4-18NPT
Ford	FIESTA VI	08-	SPJC	1.4	Petrol	1/4-18NPT
Ford	FIESTA VI	08-	RTJA	1.4	LPG	1/4-18NPT
Ford	FIESTA VI	08-	RTJB	1.4	LPG	1/4-18NPT
Ford	FIESTA VI	08-	F6JD	1.4TDCI	Diesel	M16X1.5 (9)
Ford	FIESTA VI	08-	HHJC	1.6TDCI	Diesel	M16X1.5 (9)
Ford	FIESTA VI	08-	HHJD	1.6TDCI	Diesel	M16X1.5 (9)
Ford	FIESTA VI	08-	HHJE	1.6TDCI	Diesel	M16X1.5 (9)
Ford	FIESTA VI	08-	HHJF	1.6TDCI	Diesel	M16X1.5 (9)
Ford	FIESTA VI	10-	TZJA	1.6TDCI	Diesel	M16X1.5 (9)
Ford	FIESTA VI	10-	TZJB	1.6TDCI	Diesel	M16X1.5 (9)
Ford	FIESTA VI	10-	UBJA	1.6TDCI	Diesel	M16X1.5 (9)
Ford	FIESTA VI	08-	HXJA	1.6 TI VCT	Petrol	1/4-18NPT
Ford	FIESTA VI	10-	HXJB	1.6 TI VCT	Petrol	1/4-18NPT
Ford	Focus	98-05	FXDA	1.4 Zetec-SE SFI	Petrol	1/4-18NPT
Ford	Focus	00-05	FXDB	1.4 Zetec-SE SFI	Petrol	1/4-18NPT
Ford	Focus	98-05	FXDC	1.4 Zetec-SE SFI	Petrol	1/4-18NPT
Ford	Focus	98-05	FXDD	1.4 Zetec-SE SFI	Petrol	1/4-18NPT
Ford	Focus	04-	FXJA	1,4	Petrol	
Ford	Focus	04-	ASDA	1.4 16V DURATEC	Petrol	3/8-18NPT
Ford	Focus	04-	ASDB	1.4 16V DURATEC	Petrol	3/8-18NPT
Ford	Focus	02-04	CDDA	1.6 Zetec-SE SFI	Petrol	
Ford	Focus	98-05	FYDA	1.6 Zetec-SE SFI	Petrol	1/4-18NPT
Ford	Focus	00-05	FYDB	1.6 Zetec-SE SFI	Petrol	1/4-18NPT
Ford	Focus	98-05	FYDC	1.6 Zetec-SE SFI	Petrol	1/4-18NPT
Ford	Focus	00-05	FYDD	1.6 Zetec-SE SFI	Petrol	1/4-18NPT
Ford	Focus	02-05	FYDH	1.6 16V FFV	Petrol	1/4-18NPT
Ford	Focus	04-	HWDA	1.6 16V DURATEC	Petrol	1/4-18NPT
Ford	Focus	04-	HWDB	1.6 16V DURATEC	Petrol	1/4-18NPT

Ford	Focus	04-	HXDA/B	1.6 16V TI	Petrol	3/8-18NPT
Ford	Focus	07-	SIDA	1.6 16V TI	Petrol	3/8-18NPT
Ford	Focus	07-	SHDA	1.6 16V DURATEC	Petrol	3/8-18NPT
Ford	Focus	07-	G8DD	1.6D ECO	Diesel	M16X1.5 (9)
Ford	Focus	09-	GPDA	1.6D ECO	Diesel	M16X1.5 (9)
Ford	Focus	04-	G8DA	1.6 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	04-	G8DB	1.6 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	04-	HHDA	1.6 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	04-	HHB	1.6 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	04-	MTDA	1.6 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	10-	GPDC	1.6 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	10-	G8DE	1.6 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	10-	G8DF	1.6 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	11-	TZJA	1.6 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	00-02	EYDB	1.8 Zetec-E SFI	Petrol	1/4-18NPT
Ford	Focus	98-05	EYDC	1.8 Zetec-E SFI	Petrol	1/4-18NPT
Ford	Focus	00-02	EYDD	1.8 Zetec-E SFI	Petrol	1/4-18NPT
Ford	Focus	00-05	EYDE	1.8 Zetec-E SFI	Petrol	1/4-18NPT
Ford	Focus	00-05	EYDF	1.8 Zetec-E SFI	Petrol	1/4-18NPT
Ford	Focus	01-05	EYDG	1.8 Zetec-E SFI	Petrol	1/4-18NPT
Ford	Focus	01-05	EYDJ	1.8 Zetec-E SFI	Petrol	1/4-18NPT
Ford	Focus	04-	QQDB	1.8 16v DURATEC	Petrol	M12x1,5
Ford	Focus	03-05	EYDL	1.8	B/F	1/4-18NPT
Ford	Focus	05-	Q7DA	1.8	Flex Fuel	1/4-18NPT
Ford	Focus	01-05	F9DA	1.8 DuraTorq-TDCi	Diesel	1/4-18NPT
Ford	Focus	01-05	F9DB	1.8 DuraTorq-TDCi	Diesel	1/4-18NPT
Ford	Focus	02-	FFDA	1.8 DuraTorq-TDCi	Diesel	1/4-18NPT
Ford	Focus	04-	KKDA	1.8 16 V TDCI	Diesel	1/4-18NPT
Ford	Focus	98-	C9DA	1.8D Endura -td DI	Diesel	1/4-18NPT
Ford	Focus	98-	C9DB	1.8D Endura -td DI	Diesel	1/4-18NPT
Ford	Focus	98-	C9DC	1.8D Endura -td DI	Diesel	1/4-18NPT
Ford	Focus	98-	BHDA	1.8D Endura -td DI	Diesel	1/4-18NPT
Ford	Focus	98-	BHDB	1.8D Endura -td DI	Diesel	1/4-18NPT
Ford	Focus	00-	EDDB	2.0 Zetec-E SFI	Petrol	1/4-18NPT
Ford	Focus	98-	EDDC	2.0 Zetec-E SFI	Petrol	1/4-18NPT
Ford	Focus	00-	EDDD	2.0 Zetec-E SFI	Petrol	1/4-18NPT
Ford	Focus	00-	EDDF	2.0 Zetec-E SFI	Petrol	1/4-18NPT
Ford	Focus	04-	AODA	2.0 16V	Petrol	3/8-18NPT
Ford	Focus	04-	AODB	2.0 16V	Petrol	3/8-18NPT
Ford	Focus	07-	AODE	2.0 16V	Petrol	1/4-18NPT
Ford	Focus	07-	SYDA	2.0 16V	Petrol	1/4-18NPT
Ford	Focus	04-	G6DA	2.0 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	04-	G6DB	2.0 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	04-	G6DC	2.0 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	04-	G6DD	2.0 16V TDCI	Diesel	M16X1.5 (9)

Ford	Focus	04-	G6DE	2.0 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	04-	G6DF	2.0 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	07-	G6DG	2.0 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	08-	IXDA	2.0 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	11-	UFDB	2.0 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	11-	TXDB	2.0 16V TDCI	Diesel	M16X1.5 (9)
Ford	Focus	04-05	QJBA	2.2TDCI	Diesel	1/4-18NPT
Ford	Focus	08-	JZDA	2.5 RS	Petrol	
Ford	Focus CMAX	03-10	HWDA	1.6	Petrol	1/4-18NPT
Ford	Focus CMAX	03-10	HWDB	1.6	Petrol	1/4-18NPT
Ford	Focus CMAX	07-	SHDA	1.6	Petrol	1/4-18NPT
Ford	Focus CMAX	07-	SHDB	1.6	Petrol	1/4-18NPT
Ford	Focus CMAX	07-	SHDC	1.6	Petrol	1/4-18NPT
Ford	Focus CMAX	03-	G8DA	1.6TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX	03-	G8DB	1.6TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX	07-10	HHDA	1.6TDCI	Diesel	M16X1.5 (9)
FORD	Focus CMAX	05-10	HHDB	1.6TDCI	Diesel	M16X1.5 (9)
FORD	Focus CMAX	07-10	G8DA	1.6TDCI	Diesel	M16X1.5 (9)
FORD	Focus CMAX	07-10	G8DB	1.6TDCI	Diesel	M16X1.5 (9)
FORD	Focus CMAX	08-10	G8DD	1.6TDCI	Diesel	M16X1.5 (9)
FORD	Focus CMAX	10-	G8DE	1.6TDCI	Diesel	M16X1.5 (9)
FORD	Focus CMAX	10-	G8DF	1.6TDCI	Diesel	M16X1.5 (9)
FORD	Focus CMAX	08-	GPDA	1.6TDCI	Diesel	M16X1.5 (9)
FORD	Focus CMAX	10-	GPDC	1.6TDCI	Diesel	M16X1.5 (9)
FORD	Focus CMAX	10-	TZJA	1.6TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX	03-	HXDA	1.6 TIVCT	Petrol	3/8-18NPT
Ford	Focus CMAX	07-	SIDA	1.6 TIVCT	Petrol	3/8-18NPT
Ford	Focus CMAX	10-	PNDA	1.6 TIVCT	Petrol	1/4-18NPT
Ford	Focus CMAX	10-	IQDA	1.6 TIVCT	Petrol	1/4-18NPT
Ford	Focus CMAX	10-	IQDB	1.6 TIVCT	Petrol	1/4-18NPT
Ford	Focus CMAX	03-	CSDA	1.8	Petrol	1/4-18NPT
Ford	Focus CMAX	03-	CSDB	1.8	Petrol	1/4-18NPT
Ford	Focus CMAX	03-	QQDA	1.8	Petrol	1/4-18NPT
Ford	Focus CMAX	07-	QQDB	1.8	Petrol	1/4-18NPT
Ford	Focus CMAX	04-	QQDC	1.8	Petrol	1/4-18NPT
Ford	Focus CMAX	05-	Q7DA	1.8	Flex Fuel	1/4-18NPT
Ford	Focus CMAX	03-	KKDA	1.8D TDCI	Diesel	1/4-18NPT
Ford	Focus CMAX	03-	BHPA	1.8D TDCI	Diesel	1/4-18NPT
Ford	Focus CMAX	03-	HCPA	1.8D TDCI	Diesel	1/4-18NPT
Ford	Focus CMAX	03-	AODA	2.0L	Petrol	1/4-18NPT
Ford	Focus CMAX	03-	AODB	2.0L	Petrol	1/4-18NPT
Ford	Focus CMAX	07-	SYDA	2.0L	Petrol	1/4-18NPT
Ford	Focus CMAX	08-	AODE	2.0L	Petrol	1/4-18NPT
Ford	Focus CMAX	03-	G6DA	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX	03-	G6DB	2.0 TDCI	Diesel	M16X1.5 (9)

Ford	Focus CMAX	03-	G6DC	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX	03-	G6DD	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX	03-	G6DE	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX	03-	G6DF	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX	07-	G6DG	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX	07-	IXDA	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX	10-	TYDA	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX	10-	UFDB	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX	10-	TXDA	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX	10-	UKDB	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX GRAND	10-	JTDA	1.6SCTI	Petrol	
Ford	Focus CMAX GRAND	10-	JTDB	1.6SCTI	Petrol	
Ford	Focus CMAX GRAND	10-	JQDA	1.6SCTI	Petrol	
Ford	Focus CMAX GRAND	10-	JQDB	1.6SCTI	Petrol	
Ford	Focus CMAX GRAND	10-	PNDA	1.6 TIVCT	Petrol	
Ford	Focus CMAX GRAND	10-	IQDA	1.6 TIVCT	Petrol	
Ford	Focus CMAX GRAND	10-	IQDB	1.6 TIVCT	Petrol	
FORD	Focus CMAX GRAND	10-	TZJA	1.6TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX GRAND	10-	TYDA	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX GRAND	10-	UFDB	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX GRAND	10-	TXDA	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Focus CMAX GRAND	10-	UKDB	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	FUSION	02-	FUJA	1.25	Petrol	1/4-18NPT
Ford	FUSION	02-	FUJB	1.25	Petrol	1/4-18NPT
Ford	FUSION	02-	FXJA	1.4	Petrol	1/4-18NPT
Ford	FUSION	02-	FXJB	1.4	Petrol	1/4-18NPT
Ford	FUSION	02-	F6JA	1.4TDCI	Diesel	M16X1.5 (9)
Ford	FUSION	03-	F6JB	1.4TDCI	Diesel	M16X1.5 (9)
Ford	FUSION	02-	F6JC	1.4TDCI	Diesel	M16X1.5 (9)
Ford	FUSION	02-	FYJA	1.6	Petrol	1/4-18NPT
Ford	FUSION	03-	FYJB	1.6	Petrol	1/4-18NPT
Ford	FUSION	04-	HHJA	1.6TDCI	Diesel	M16X1.5 (9)
Ford	FUSION	05-	HHJB	1.6TDCI	Diesel	M16X1.5 (9)
FORD	KA	09-	AAAA	1.2 8V	Petrol	
FORD	KA	09-	BAAA	1.3TDCI	Diesel	M14 X 1.5(8)
FORD	KA	09-	BAAB	1.3TDCI	Diesel	M14 X 1.5(8)
Ford	Ka	96-00	JJB	1,3	Petrol	1/4-18NPT
Ford	Ka	96-00	J4D	1,3	Petrol	1/4-18NPT
Ford	Ka	96-00	JJD	1,3	Petrol	1/4-18NPT
Ford	Ka	98-00	JJF	1,3	Petrol	1/4-18NPT
Ford	Ka	96-00	J4K	1,3	Petrol	1/4-18NPT
Ford	Ka	98-00	J4M	1,3	Petrol	1/4-18NPT
Ford	Ka	00-04	JJG	1,3	Petrol	1/4-18NPT
Ford	Ka	00-04	JJH	1,3	Petrol	1/4-18NPT
Ford	Ka	00-04	JJL	1,3	Petrol	1/4-18NPT

Ford	Ka	00-04	J4N	1,3	Petrol	1/4-18NPT
Ford	Ka	00-04	J4P	1,3	Petrol	1/4-18NPT
Ford	Ka	00-04	J4S	1,3	Petrol	1/4-18NPT
Ford	Ka	01-06	BAA	1,3	Petrol	1/4-18NPT
Ford	Ka	01-06	A9A	1,3	Petrol	1/4-18NPT
Ford	Ka	01-06	A9B	1,3	Petrol	1/4-18NPT
Ford	Ka SPORT	02-	CDC	1.6	Petrol	1/4-18NPT
Ford	Ka SPORT	02-	CDB	1.6	Petrol	1/4-18NPT
Ford	Ka Street	03-	CDRA	1.6	Petrol	1/4-18NPT
Ford	Ka Street	03-	CDRB	1.6	Petrol	1/4-18NPT
Ford	Galaxy	06-	FFWA	1.8 TDCI	Diesel	1/4-18NPT
Ford	Galaxy	06-	QYWA	1.8 TDCI	Diesel	1/4-18NPT
Ford	Galaxy	95-99	1Z	1.9 TDi	Diesel	M10X1.0(6)
Ford	Galaxy	95-00	AFN	1.9 TDi	Diesel	M10X1.0(6)
Ford	Galaxy	95-00	AHU	1.9 TDi	Diesel	M10X1.0(6)
Ford	Galaxy	99-00	AVG	1.9 TDi	Diesel	M10X1.0(6)
Ford	Galaxy	02-06	ASZ	1.9 Tdi PD	Diesel	M10X1.0(6)
Ford	Galaxy	03-06	ASZ1	1.9 Tdi PD	Diesel	M10X1.0(6)
Ford	Galaxy	99-06	ANU	1.9 Tdi PD	Diesel	M10X1.0(6)
Ford	Galaxy	00-06	AUY	1.9 Tdi PD	Diesel	M10X1.0(6)
Ford	Galaxy	05-06	BTB	1.9 Tdi PD	Diesel	M10X1.0(6)
Ford	Galaxy	95-00	NSE	2.0 DOHC SEFI	Petrol	1/4-18NPT
Ford	Galaxy	00-06	ZVSA	2.0 DOHC SEFI	Petrol	1/4-18NPT
Ford	Galaxy	06-	AOWA	2.0 16V	Petrol	1/4-18NPT
Ford	Galaxy	08-	TBWA	2.0 FFV	Petrol	1/4-18NPT
Ford	Galaxy	09-	TBWB	2.0 FFV	Petrol	1/4-18NPT
Ford	Galaxy	09-	AOWB	2.0 PFI	Petrol	1/4-18NPT
Ford	Galaxy	10-	TNBA	2.0 SCTI	Petrol	1/4-18NPT
Ford	Galaxy	10-	TNWA	2.0 SCTI	Petrol	1/4-18NPT
Ford	Galaxy	08-	QXWA	2.0 TDCI	Diesel	1/4-18NPT
FORD	Galaxy	06-	QXWB	2.0 TDCI	Diesel	1/4-18NPT
Ford	Galaxy	10-	TYWA	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Galaxy	10-	UKWA	2.0 TDCI	Diesel	M16X1.5 (9)
Ford	Galaxy	10-	UFWA	2.0 TDCI	Diesel	1/4-18NPT
Ford	Galaxy	08-	Q4BA	2.2 TDCI	Diesel	M16X1.5 (9)
Ford	Galaxy	10-	KNWA	2.2 TDCI	Diesel	M16X1.5 (9)
Ford	Galaxy	95-00	Y5B	2.3 DOHC 16V SEFI	Petrol	1/4-18NPT
Ford	Galaxy	00-06	E5SA	2.3DOHC 16V SEFI	Petrol	1/4-18NPT
Ford	Galaxy	01-06	E5SB	2.3DOHC 16V SEFI	Petrol	1/4-18NPT
Ford	Galaxy	07-	SEWA	2.3 16V	Petrol	1/4-18NPT
Ford	Galaxy	95-00	AAA	2.8i/VR6 Synchro	Petrol	M10X1.0(6)
Ford	Galaxy	98-00	AMY	2.8i/VR6 Synchro	Petrol	M10X1.0(6)
Ford	Galaxy	00-	AYL	2.8 24V	Petrol	M10X1.0(6)
Ford	KUGA	08-	G6DB	2.0TDCI	Diesel	M16X1.5 (9)
Ford	KUGA	08-	G6DG	2.0TDCI	Diesel	M16X1.5 (9)

Ford	KUGA	10-	UFDA	2.0TDCI	Diesel	M16X1.5 (9)
Ford	KUGA	10-	TXDA	2.0TDCI	Diesel	M16X1.5 (9)
Ford	Maverick	04-07	GZ	2,3	Petrol	1/4-18NPT
Ford	Mondeo	94-00	L1J	1.6 16V Zetec-E	Petrol	1/4-18NPT
Ford	Mondeo	98-	L1L	1.6 16V Zetec-E	Petrol	1/4-18NPT
Ford	Mondeo	96-00	L1N	1.6 16V Zetec-E	Petrol	1/4-18NPT
Ford	Mondeo	96-00	L1Q	1.6 16V Zetec-E	Petrol	1/4-18NPT
Ford	Mondeo	07-	RHBA	1.6 TI VCT	Petrol	1/4-18NPT
Ford	Mondeo	07-	PNBA	1.6 TI VCT	Petrol	1/4-18NPT
Ford	Mondeo	94-98	RKB	1.8 16V Zetec SEFI	Petrol	3/8-18NPT
Ford	Mondeo	96-98	RKF	1.8 16V Zetec-E SEFI	Petrol	3/8-18NPT
Ford	Mondeo	96-00	RKJ	1.8 16V Zetec-E SEFI	Petrol	3/8-18NPT
Ford	Mondeo	96-00	RKH	1.8 16V Zetec-E SEFI	Petrol	3/8-18NPT
Ford	Mondeo	01-07	CHBA	1.8	Petrol	1/4x18h" NPTF
Ford	Mondeo	01-07	CHBB	1.8	Petrol	1/4x18h" NPTF
Ford	Mondeo	01-07	CGBA	1.8	Petrol	1/4x18h" NPTF
Ford	Mondeo	01-07	CGBB	1.8	Petrol	1/4x18h" NPTF
Ford	Mondeo	03-05	CFBA	1.8 SCI 16V	Petrol	1/4x18h" NPTF
Ford	Mondeo	93-96	RFM	1.8D TCI	Diesel	31422500
Ford	Mondeo	96-00	RFN	1.8D TCI	Diesel	1/4x18h" NPTF
Ford	Mondeo	07-	FFBA	1.8D TDCI	Diesel	1/4-18NPT
Ford	Mondeo	07-	QYBA	1.8D TDCI	Diesel	1/4-18NPT
Ford	Mondeo	07-	KHBA	1.8D TDCI	Diesel	1/4-18NPT
Ford	Mondeo	96-00	NGB	2.0 Zetec-E SEFI	Petrol	1/4-18NPT
Ford	Mondeo	96-00	NGC	2.0 Zetec-E SEFI	Petrol	1/4-18NPT
Ford	Mondeo	96-00	NGD	2.0 Zetec-E SEFI	Petrol	1/4-18NPT
Ford	Mondeo	00-07	CJBA	2.0	Petrol	1/4x18h" NPTF
Ford	Mondeo	00-07	CJBB	2.0	Petrol	1/4x18h" NPTF
Ford	Mondeo	07-	AOBA	2.0 16V	Petrol	1/4-18NPT
Ford	Mondeo	07-	TBBA	2.0FFV	Petrol	1/4-18NPT
Ford	Mondeo	09-	TBBB	2.0FFV	Petrol	1/4-18NPT
Ford	Mondeo	09-	AOBC	2.0 PFI	Petrol	1/4-18NPT
Ford	Mondeo	10-	TNBA	2.0SCTI	Petrol	1/4-18NPT
Ford	Mondeo	00-07	FMBA	2.0D DuraTorq-TDCi	Diesel	1/4-18NPT
Ford	Mondeo	02-07	HJBA	2.0D DuraTorq-TDCi	Diesel	1/4-18NPT
Ford	Mondeo	03-07	N7BA	2.0D DuraTorq-TDCi	Diesel	1/4-18NPT
Ford	Mondeo	03-07	HJBC	2.0D DuraTorq-TDCi	Diesel	1/4-18NPT
Ford	Mondeo	02-	HJBB	2.0D DuraTorq-TDCi	Diesel	1/4-18NPT
Ford	Mondeo	04-	SDBA	2.0D DuraTorq-TDCi	Diesel	1/4-18NPT
Ford	Mondeo	07-	AZBA	2.0D DuraTorq-TDCi	Diesel	M16X1.5 (9)
Ford	Mondeo	07-	KLBA	2.0D DuraTorq-TDCi	Diesel	M16X1.5 (9)
Ford	Mondeo	07-	QXBB	2.0D DuraTorq-TDCi	Diesel	M16X1.5 (9)
Ford	Mondeo	07-	LPBA	2.0D DuraTorq-TDCi	Diesel	M16X1.5 (9)
Ford	Mondeo	07-	AZBC	2.0D DuraTorq-TDCi	Diesel	M16X1.5 (9)
Ford	Mondeo	09-	TYBA	2.0D DuraTorq-TDCi	Diesel	M16X1.5 (9)

Ford	Mondeo	09-	UKBA	2.0D DuraTorq-TDCi	Diesel	M16X1.5 (9)
Ford	Mondeo	09-	UFBA	2.0D DuraTorq-TDCi	Diesel	M16X1.5 (9)
Ford	Mondeo	09-	TXBA	2.0D DuraTorq-TDCi	Diesel	M16X1.5 (9)
Ford	Mondeo	00-06	D5BA	2.0D DuraTorq-TDDi	Diesel	1/4-18NPT
Ford	Mondeo	00-02	D6BA	2.0D DuraTorq-TDDi	Diesel	1/4-18NPT
Ford	Mondeo	04-07	QJBA	2.2D TDCI	Diesel	1/4-18NPT
Ford	Mondeo	04-07	QJBB	2.2D TDCI	Diesel	1/4-18NPT
Ford	Mondeo	08-	Q4BA	2.2D TDCI	Diesel	M16X1.5 (9)
Ford	Mondeo	10-	KNBA	2.2D TDCI	Diesel	M16X1.5 (9)
FORD	Mondeo	07-	SEBA	2.3 16V	Petrol	1/4-18NPT
FORD	Mondeo	93-96	SEA	2.5 Duratec-VE SEFI	Petrol	3/8x18h" NPT
FORD	Mondeo	99-00	SEB	2.5 Duratec-VE SEFI	Petrol	3/8x18h" NPT
FORD	Mondeo	99-00	SEC	2.5 Duratec-VE SEFI	Petrol	3/8x18h" NPT
FORD	Mondeo	98-00	SGA	2.5 Duratec-VE SEFI	Petrol	3/8-18NPT
FORD	Mondeo	00-07	LCBD	2.5	Petrol	3/8 npt
FORD	Mondeo	04-07	REBA	3.0	Petrol	3/8 npt
FORD	Mondeo	01-07	MEBA	3.0 ST220	Petrol	3/8 npt
FORD	PUMA	97-00	FHD	1.4	Petrol	3/8-18NPT
FORD	PUMA	97-00	FHF	1.4	Petrol	3/8-18NPT
FORD	PUMA	00-02	L1W	1.6	Petrol	3/8-18NPT
FORD	PUMA	97-	MHA	1.7	Petrol	3/8-18NPT
FORD	PUMA	00-02	MHB	1.7		3/8-18NPT
FORD	S MAX	06-	FFWA	1.8 TDCI	Diesel	1/4-18NPT
FORD	S MAX	06-	QYWA	1.8 TDCI	Diesel	1/4-18NPT
FORD	S MAX	06-	AOWA	2.0 16V	Petrol	M16X1.5 (9)
FORD	S MAX	08-	TBWA	2.0 FFV	Petrol	M16X1.5 (9)
FORD	S MAX	09-	TBWB	2.0 FFV	Petrol	M16X1.5 (9)
FORD	S MAX	09-	AOWB	2.0 PFI	Petrol	M16X1.5 (9)
FORD	S MAX	10-	TNBA	2.0 SCTI	Petrol	1/4-18NPT
FORD	S MAX	10-	TPBA	2.0 SCTI	Petrol	
FORD	S MAX	10-	TNWA	2.0 SCTI	Petrol	M16X1.5 (9)
FORD	S MAX	06-	QXWA	2.0 TDCI	Diesel	M16X1.5 (9)
FORD	S MAX	06-	QXWB	2.0 TDCI	Diesel	M16X1.5 (9)
FORD	S MAX	06-	AZWA	2.0 TDCI	Diesel	M16X1.5 (9)
FORD	S MAX	10-	TYWA	2.0 TDCI	Diesel	M16X1.5 (9)
FORD	S MAX	10-	UKWA	2.0 TDCI	Diesel	M16X1.5 (9)
FORD	S MAX	10-	TXWA	2.0 TDCI	Diesel	M16X1.5 (9)
FORD	S MAX	10-	UFWA	2.0 TDCI	Diesel	M16X1.5 (9)
FORD	S MAX	08-	Q4BA	2.2 TDCI	Diesel	M16X1.5 (9)
FORD	S MAX	10-	KNWA	2.2 TDCI	Diesel	M16X1.5 (9)
FORD	S MAX	07-	SEWA	2.3 16 V	Petrol	1/4-18NPT
FORD	S MAX	06-	HUWA	2.5 20 V	Petrol	M16X1.5 (9)
FORD	S MAX	06-	HYDA	2.5 20 V	Petrol	
FORD	TRANSIT CONNECT	02-	EYPA	1.8	Petrol	1/4-18NPT
FORD	TRANSIT CONNECT	02-	EYPC	1.8	Petrol	1/4-18NPT

FORD	TRANSIT CONNECT	02-	HCPA	1.8D TDCI	Diesel	1/4-18NPT
FORD	TRANSIT CONNECT	02-	HCPB	1.8D TDCI	Diesel	1/4-18NPT
FORD	TRANSIT CONNECT	07-	RWPA	1.8D TDCI	Diesel	1/4-18NPT
FORD	TRANSIT CONNECT	07-	P7PA	1.8D TDCI	Diesel	1/4-18NPT
FORD	TRANSIT CONNECT	07-	R2PA	1.8D TDCI	Diesel	1/4-18NPT
FORD	TRANSIT CONNECT	02-	BHPA	1.8D TDDI	Diesel	1/4-18NPT
Ford	Transit	94-00	NSF	2.0 DOHC 8V SEFI	Petrol	
Ford	Transit	98-00	NSH	2.0 DOHC 8V SEFI	Petrol	
Ford	Transit	94-00	NSG	2.0 DOHC 8V SEFI	Petrol	
Ford	Transit	00-06	ABFA	2.0 TDDI	Diesel	1/4-18NPT
Ford	Transit	00-06	D3FA	2.0 TDDI	Diesel	1/4-18NPT
Ford	Transit	00-06	F3FA	2.0 TDDI	Diesel	
Ford	Transit	02-06	FIFA	2.0D TDCI	Diesel	1/4-18NPT
Ford	Transit	06-	P8FA	2.2 TDCI	Diesel	
Ford	Transit	06-	P8FB	2.2 TDCI	Diesel	
Ford	Transit	06-	QVFA	2.2 TDCI	Diesel	1/4-18NPT
Ford	Transit	06-	QWFA	2.2 TDCI	Diesel	1/4-18NPT
Ford	Transit	08-	PGFA	2.2 TDCI	Diesel	1/4-18NPT
Ford	Transit	08-	PGFB	2.2 TDCI	Diesel	1/4-18NPT
Ford	Transit	08-	SRFA	2.2 TDCI	Diesel	1/4-18NPT
Ford	Transit	08-	SRFB	2.2 TDCI	Diesel	1/4-18NPT
Ford	Transit	08-	SRFC	2.2 TDCI	Diesel	1/4-18NPT
Ford	Transit	08-	SRFD	2.2 TDCI	Diesel	1/4-18NPT
Ford	Transit	08-	SRFE	2.2 TDCI	Diesel	1/4-18NPT
Ford	Transit	00-02	E5FA	2.3 DOHC 16v SEFI	Petrol	
Ford	Transit	02-	E5FC	2.3 DOHC 16v SEFI	Petrol	
Ford	Transit	06-	GZFA	2.3 16V	Petrol	1/4-18NPT
Ford	Transit	06-	GZFB	2.3 16V	Petrol	
Ford	Transit	08-	GZFC	2.3 CNG	Petrol	1/4-18NPT
Ford	Transit	02-06	D0FA	2.4D DuraTorq-TDDI	Diesel	31428100
Ford	Transit	00-06	D2FA	2.4D DuraTorq-DI	Diesel	1/4-18NPT
Ford	Transit	00-	D2FB	2.4D DuraTorq-TDDI	Diesel	1/4-18NPT
Ford	Transit	00-06	D4FA	2.4D DuraTorq-TDDI	Diesel	1/4-18NPT
Ford	Transit	00-06	F4FA	2.4D DuraTorq-TDDI	Diesel	1/4-18NPT
Ford	Transit	04-06	FXFA	2.4D DuraTorq-TDDI	Diesel	1/4-18NPT
Ford	Transit	04-06	H9FA	2.4D DuraTorq-TDCI	Diesel	1/4-18NPT
Ford	Transit	06-	H9FB	2.4D DuraTorq-TDCI	Diesel	1/4-18NPT
Ford	Transit	06-	H9FD	2.4D DuraTorq-TDCI	Diesel	1/4-18NPT
Ford	Transit	06-	JXFA	2.4D DuraTorq-DI	Diesel	1/4-18NPT
Ford	Transit	06-	JXFC	2.4D DuraTorq-DI	Diesel	1/4-18NPT
Ford	Transit	06-	PHFA	2.4D DuraTorq-DI	Diesel	1/4-18NPT
Ford	Transit	06-	PHFC	2.4D DuraTorq-DI	Diesel	1/4-18NPT
Ford	Transit	95-	4FA	2.5D	Diesel	31423000
Ford	Transit	95-	4FB	2.5D	Diesel	31423000
Ford	Transit	95-	4FC	2.5D	Diesel	31423000

Ford	Transit	94-	4FD	2.5D	Diesel	31423000
Ford	Transit	95-	4HB	2.5D	Diesel	3/8-18NPT
Ford	Transit	94-	4HC	2.5D	Diesel	3/8-18NPT
Ford	Transit	97-00	4ED	2.5D TCI	Diesel	31423000
Ford	Transit	94-00	4GA	2.5TD	Diesel	31423000
Ford	Transit	94-00	4GB	2.5TD	Diesel	31423000
Ford	Transit	94-00	4GC	2.5TD	Diesel	31423000
Ford	Transit	94-00	4GD	2.5TD	Diesel	31423000
Ford	Transit	94-00	4EB	2.5TD	Diesel	31423000
Ford	Transit	94-00	4EC	2.5TD	Diesel	3/8-18NPT
Ford	Transit	94-00	4GE	2.5TD	Diesel	31423000
Ford	Transit	94-00	4HB	2.5TD	Diesel	31423000
Ford	Transit	07-	SAFA	3.2 DTDCI	Diesel	1/4-18NPT
Ford	Transit	07-	SAFB	3.2 DTDCI	Diesel	1/4-18NPT