

Initial List of Loan Tools for the Ford Loan Tool Program

Global Tool Number	Application	Description
205-1082	Tourneo Connect	Installer, Halfshaft Flange Seal
205-1089	Tourneo Connect	Installer, Output shaft Flange
205-1096	Tourneo Connect	Installer, Rear Flange
205-1097	Tourneo Connect	Remover, Rear Flange
205-1103	Tourneo Connect	Installer, Differential Bushing
205-1104	Tourneo Connect	Installer, Differential Bearing
205-1105	Tourneo Connect	Remover, Differential Bushing
205-1120	Tourneo Connect	Filling Tool, Differential Fluid
303-1473-01	Tourneo Connect	Adapter for 303-1473
303-1724-01	Tourneo Connect	Adapter for 303-1724
303-1739	Tourneo Connect	Remover, Piston Pin
303-1772	Tourneo Connect	Pressure Tester, Cooling System
303-1775	Tourneo Connect	Electronic Measuring System, Camshaft Setting
308-1001	Tourneo Connect	Mounting Fixture, Transmission
308-1002	Tourneo Connect	Holding Tool, Transmission
308-1003	Tourneo Connect	Installer, Transmission Blanking Plug
308-1004	Tourneo Connect	Remover, Selector shaft Bearing Cup
308-1005	Tourneo Connect	Remover, Reverse Gear shaft Stop Sleeve
308-1006	Tourneo Connect	Installer, Transfer Case Input shaft Seal
308-1007	Tourneo Connect	Remover/Installer, Fifth Gear
308-1008	Tourneo Connect	Installer, Roller Bearing Outer Race
308-1009	Tourneo Connect	Installer, Roller Bearing Outer Race
308-1010	Tourneo Connect	Installer, Roller Bearing Outer Race
308-1011	Tourneo Connect	Installer, Roller Bearing Inner Race
308-1013	Tourneo Connect	Thrust Pad, Output Shaft
308-1014	Tourneo Connect	Thrust Pad, Output Shaft
308-1015	Tourneo Connect	Support Tool, Clutch Housing
308-1022	Tourneo Connect	Installer, Input shaft Bearing
308-1023	Tourneo Connect	Installer, Bearing Cup
308-1024	Tourneo Connect	Holding Tool, Input Shaft
308-1025	Tourneo Connect	Installer, Syncro Gear Pack
308-1026	Tourneo Connect	Installer, Bearing Cup
308-1027	Tourneo Connect	Installer, Bearing Cup
308-1028	Tourneo Connect	Installer, Syncro Gear Pack
308-1029	Tourneo Connect	Remover, Bearing
308-984	Tourneo Connect	Installer, Shift shaft Bushing/Bearing
308-985	Tourneo Connect	Installer, Selector shaft Angled Rod
308-986	Tourneo Connect	Installer, Reverse Gear shaft Needle Bearing Sleeve
308-987	Tourneo Connect	Caps, Transmission
308-988	Tourneo Connect	Installer, Selector shaft Cover
308-990	Tourneo Connect	Installer, Gear Wheel
308-991	Tourneo Connect	Installer, Bearing Cup
308-993	Tourneo Connect	Installer, Reverse Gear shaft Needle Bearing
308-995	Tourneo Connect	Remover, Bearing Cup
308-996	Tourneo Connect	Remover, Bearing Cup
308-997	Tourneo Connect	Installer, Transmission Blanking Plug
308-998	Tourneo Connect	Remover, Reverse Gear shaft Stop Sleeve
308-999	Tourneo Connect	Remover/Installer, Output shaft Bearing
412-161	Tourneo Connect	Adapters, Air Conditioning
415-010	Tourneo Connect	Pliers, Operating Button
501-434	Tourneo Connect	Remover, Power Point Socket
502-022	Tourneo Connect	Remover/Installer, Subframe Bushing Guide
204-069	Ranger Raptor	Remover/Installer, Front Wheel Hub
204-172	Ranger Raptor	Remover/Installer, Ball Joint
204-358	Ranger Raptor	Remover / Installer, Ball Joint
205-090	Ranger Raptor	Plate Bearing/Oil Seal
205-098	Ranger Raptor	Draw Bar, Rear Axle

Initial List of Loan Tools for the Ford Loan Tool Program

Global Tool Number	Application	Description
205-1014	Ranger Raptor	Gauge Disc
205-1051	Ranger Raptor	Remover Installer, Axle Tube Bushing
205-1053	Ranger Raptor	Installer, Axle Tube Needle Bearing
205-1055	Ranger Raptor	Companion Flange Installer
205-1077	Ranger Raptor	Wrench, Axle Nut
205-1078	Ranger Raptor	Holding Fixture, Axle shaft
205-1080	Ranger Raptor	Gauge Tube, Drive Pinion
205-1081	Ranger Raptor	Installer, Tone Ring
205-1095	Ranger Raptor	Installer, Drive Pinion Seal
205-1098	Ranger Raptor	Installer, Differential Bearing
205-110	Ranger Raptor	Adapter for 205-S127
205-1101	Ranger Raptor	Installer, Pinion Bearing Cone
205-1102	Ranger Raptor	Installer, Pinion Bearing Cup
205-140	Ranger Raptor	Installer Drive Pinion Bearing Cup
205-281	Ranger Raptor	Gauge/Aligner, Drive Pinion
205-394	Ranger Raptor	Protector, Drive Pinion Thread
205-495	Ranger Raptor	Installer, Transmission Output Shaft Flange
205-D016	Ranger Raptor	Step Plate, Universal
205-D019	Ranger Raptor	Step Plate, Universal
205-D031	Ranger Raptor	Adapter, Pinion Alignment
211-001	Ranger Raptor	Remover, Tie-Rod End
303-1634	Ranger Raptor	Lifting Eyes, Engine
307-713	Ranger Raptor	Installer, Pinion Bearing Cup
308-250	Ranger Raptor	Installer
308-614	Ranger Raptor	Installer shaft Seal
308-945	Ranger Raptor	Installer, Fixed Yoke Output Seal
303-1670	Ranger Lion	Alignment Peg, Camshaft
303-1671	Ranger Lion	Locking Tool, Crankshaft
303-1672	Ranger Lion	Installer, Front Crankshaft Seal
303-1673	Ranger Lion	Installer, Camshaft Seal
303-1674	Ranger Lion	Holding Tool, Camshaft Sprocket
303-1676	Ranger Lion	Installer, Crankshaft Position Sensor Ring
303-1677	Ranger Lion	Locking Tool, Flywheel
303-1678	Ranger Lion	Remover, Fuel Injection Pump Sprocket
303-1679	Ranger Lion	Locking Tool, Fuel Injection Pump Sprocket
307-730-02	Ranger Lion	Adapter, Transmission Fluid Fill
205-005	Ranger Base	Installer, Pinion Bearing Cone
205-1024	Ranger Base	Installer, Outer Pinion Bearing Cup
205-1054	Ranger Base	Pinion Thread Protector
205-1058	Ranger Base	Installer, Differential Bearing
205-1059	Ranger Base	Tube Gauge
205-1060	Ranger Base	Dummy Pinion Bearing
205-109	Ranger Base	Adapter for 205-S127
205-157	Ranger Base	Adapter for 205-S156
205-220KIT	Ranger Base	Installer, Differential Shim
205-480	Ranger Base	Installer, Drive Pinion Bearing Cup
303-1511	Ranger Base	Pressure Tester, EGR Cooler
303-1511-01	Ranger Base	Adapter for 303-1511
307-181	Ranger Base	Installer, Trans Axle Bearing Cone
308-047	Ranger Base	Remover, Bearing Cup
308-375	Ranger Base	Remover, Input Shaft Seal
308-410	Ranger Base	Installer, Output Shaft Front Bearing
308-430	Ranger Base	Installer, PTO Drive Gear Outer Oil Seal
308-431	Ranger Base	Installer, Halfshaft Oil Seal
308-976	Ranger Base	Replacer Converter Seal
310-266	Ranger Lion	Remover, Injector
205-388	F-150	Replacer, Pinion Bearing Cone

Initial List of Loan Tools for the Ford Loan Tool Program

Global Tool Number	Application	Description
302-004	F-150	Installer, Axle Seal
302-005	F-150	Adapters, Bench Mount
302-006	F-150	Aligner, Planetary Gear
307-661-02	F-150	Adapter block
307-817	F-150	Installer, Sleeve
307-818	F-150	Installer, R2 Bearing
307-819	F-150	Cup, Receiver
307-820	F-150	Installer, R3 roller bearing
204-033	Legacy	Bushing Replacer
204-035	Legacy	Bushing Remover
204-038	Legacy	BRG Cup Replacer
204-058	Legacy	Remover/Installer, Lower Arm Bushing
204-060	Legacy	Bushing Replacer
204-128	Legacy	Adapter for 204-S127
204-175	Legacy	Installer, HalfshaftSeal
204-177	Legacy	Installer, Front Wheel Hub Seal
204-185	Legacy	Torsion Bar Tool
204-281	Legacy	Installer, Front Differential Bearing Cup
204-282	Legacy	Installer, Front Differential Bearing Cup
204-286	Legacy	Installer
204-605-01	Legacy	Adapter for 204-605
204-616	Legacy	Installer, RDU Bushing (70mm)
204-618	Legacy	Installer, RDU Bushing (60mm)
205-047-04	Legacy	Adapter for 205-047
205-097	Legacy	Rear Axle Seal Replacer
205-119	Legacy	Remover, Rear Wheel Hub
205-131	Legacy	Tube Gauge
205-137	Legacy	Pinion Seal Replacer
205-172	Legacy	Mounting Bracket, Rear Axle
205-190	Legacy	Axle Seal Replacer
205-207A	Legacy	Gauge, Differential Dummy Bearing
205-214	Legacy	Socket, Axle Nut
205-247KIT	Legacy	Gauge, Differential Dummy Bearing
205-250	Legacy	Spreader, Differential Housing
205-253	Legacy	Remover, Wheel Knuckle
205-284	Legacy	Replacer, Seal
205-295-05	Legacy	Adapter for 205-295 (Collet)
205-304A	Legacy	Installer, Drive Pinion Oil Seal
205-305	Legacy	Alignment Fixture, Rear Suspension
205-306	Legacy	Installer, Rear Wheel Hub Seal
205-314	Legacy	Socket, Drive PinionFlange Holding Wrench
205-327	Legacy	Dummy Shafts, Differential Clutch
205-340	Legacy	Replacer, Hub Seal
205-363	Legacy	Tool, Axle Torque
205-372	Legacy	Replacer, Bushing Collet
205-385	Legacy	Gauge, Differential (Traction Lock)
205-398	Legacy	Mounting Bracket, Rear Axle
205-435	Legacy	Tube, Installation
205-439	Legacy	Installer, Seal
205-496	Legacy	Holding Tool, Rear Axle Shaft
205-497	Legacy	Wrench, Axle shaftNut
205-505	Legacy	Installer, Halfshaft Seal
205-516	Legacy	Gauge, Master Pinion
205-517	Legacy	Remover Bushing
205-930	Legacy	Installer, Drive PinionBearing
205-935	Legacy	Installer,Pinion Seal
205-936	Legacy	Installer,Pinion Flange

Initial List of Loan Tools for the Ford Loan Tool Program

Global Tool Number	Application	Description
206-013	Legacy	Compressor, Brake Spring
206-014	Legacy	Wrench, ABS Pressure Switch
206-015	Legacy	Pressure Gauge, Brake Fluid
206-037	Legacy	Replacer, Output Seal
206-121	Legacy	Cover, Brake/Clutch system vacuum
211-009(KIT)	Legacy	Installer, Power Steering Pump
211-016KIT	Legacy	Remover, Power Steering Pump Pulley
211-044	Legacy	Installer, Sector Shaft Seal
211-100	Legacy	Adjustment Wrench, Steering Gear PinionNut
211-190	Legacy	Pressure Gauge, Power Steering
211-190-01	Legacy	Adapter for 211-190 (Connector)
211-199	Legacy	Remover, Power Steering Pump Pulley
211-244-01	Legacy	Adapter for 211-244
211-244KIT	Legacy	Socket, Hydraulic Line Union Nut
211-268A	Legacy	Wrench, Hydraulic Line Union Nut
211-269	Legacy	Wrench, Hydraulic Line Union Nut
303-006	Legacy	Pressure Gauge, Valve/Clutch Spring
303-041	Legacy	Installer
303-060-06	Legacy	Adapter for 303-060
303-068	Legacy	Remover, Crankshaft Timing Pulley
303-097	Legacy	Adjusting Tool
303-1048	Legacy	Adapter for Compression Test
303-1060	Legacy	Alignment Tool, Crankshaft Position Sensor
303-1061	Legacy	Alignment Plate, Camshaft
303-120	Legacy	Wrench, Intake Manifold
303-122-01	Legacy	Adapters for 303-122 (Eyebolts)
303-131	Legacy	Wrench, Intake Manifold
303-135	Legacy	Installer, Crankshaft Rope Seal
303-1474	Legacy	Fitting Tool, Extracting/fitting Valve guides
303-1478	Legacy	Setting Gauge, Tappet cover centering
303-149	Legacy	Installer, Timing Cover Seal
303-150	Legacy	Installer, Timing Cover Seal
303-151	Legacy	Installer
303-154	Legacy	Remover, CrankshaftTiming Pulley
303-171	Legacy	Aligner
303-201	Legacy	Tension Gauge, Timing Belt
303-224	Legacy	Replacer, Rear Crank Seal
303-233	Legacy	Remover/Installer, Vibration Damper/Seal
303-234	Legacy	Locking Tool
303-247	Legacy	Installer, Intake Valve Stem Seal
303-257	Legacy	Lifting Bracket, Engine
303-257-01	Legacy	Adapter for 303-257
303-292	Legacy	Remover, Valve Stem Seal
303-294	Legacy	Wrench, Intake Manifold
303-317	Legacy	Remover, Crankshaft Vibration Damper
303-323	Legacy	Replacer,Crankshaft Rear Seal
303-335KIT	Legacy	Crankshaft Damper Installer
303-338-01	Legacy	Adapters for 303-338 (Studs)
303-338-02	Legacy	Adapter for 303-338 (Plate)
303-374	Legacy	Remover
303-380	Legacy	Aligner, Camshaft
303-425	Legacy	Installer, Crankshaft Rear Seal
303-426	Legacy	Alignment Pins, Flywheel
303-429	Legacy	Compressor, Belt Tensioner
303-430	Legacy	Remover, Cylinder Liner
303-435-10A	Legacy	Mounting Plate for 303-435
303-453	Legacy	Tool, Synchro Positioning
303-474	Legacy	Replacer, Front Crank Seal

Initial List of Loan Tools for the Ford Loan Tool Program

Global Tool Number	Application	Description
303-480	Legacy	Remover, Damper Wear Ring
303-481	Legacy	Replacer, Damper Wear Ring
303-484	Legacy	Replacer, Front Crank Seal
303-486	Legacy	RMVR,Crankshaft Rear Wear Ring
303-492	Legacy	Replacer, Injector
303-496	Legacy	Installer, Timing Cover Seal
303-497	Legacy	Remover, Crankshaft Timing Pulley
303-498	Legacy	Remover/Installer, Spark Plug Connector
303-503	Legacy	Locking Tool, Crankshaft Vibration Damper
303-561	Legacy	Spacer, Rear Crank Seal Replacement
303-563A	Legacy	Compressor, Valve Tappet
303-625	Legacy	Tool, Quick Disconnect
303-627	Legacy	Adapter, Oil Pressure (FEMALE TYPE)
303-628	Legacy	Adapter, Oil Pressure (CAP ASSM.)
303-653	Legacy	Aligner, Crankshaft Seal Carrier
303-656	Legacy	Installer
303-697	Legacy	Holding Wrench
303-755	Legacy	Disconnect Tool, Quick-REL Coupling
303-756	Legacy	Adapter, Oil Pressure Leak Test
303-758	Legacy	Adapter, Crank Case Pres. Test
303-760	Legacy	Remover, EGR Valve
303-769	Legacy	Socket, Fuel IPR Valve
303-S455	Legacy	Remova/Replacement, Water Pump Pulley
307-030	Legacy	Spanner
307-033	Legacy	Remover, Transmission Fluid Pump
307-040	Legacy	Oil Pump Alignment Gauge
307-042	Legacy	Oil Pump Alignment Gauge
307-043	Legacy	Oil Pump Alignment Gauge
307-044	Legacy	Oil Pump Alignment Handl.
307-050	Legacy	Installer, Shift shaftSeal
307-064	Legacy	Remover
307-065	Legacy	Extension Housing Bush Replacement
307-105	Legacy	Installer, Torque Converter Hub Seal
307-109	Legacy	Cross Block
307-132	Legacy	Hydraulic Pressure Gauge
307-132-02	Legacy	Adapter for 307-132
307-168	Legacy	Protector-Direct Clutch Seal
307-186	Legacy	Installer, Torque Converter Seal
307-194	Legacy	Replacer, Converter Seal
307-201	Legacy	Hydraulic Pressure Gauge (0-60 bar)
307-203	Legacy	Remover, Transmission Fluid Pump
307-211	Legacy	Clamp, Control Piston
307-212	Legacy	Holding Fixture, Primary Unit
307-214	Legacy	Guide Sleeve, Reverse Clutch Piston
307-215	Legacy	Dummy Spacer, Secondary Unit
307-216	Legacy	Collet for 205-295
307-228	Legacy	Clutch Spring Comp. Plate
307-261KIT	Legacy	Alignmentment Gauge, TR Sensor
307-267	Legacy	End Play Gauge, Torque Converter
307-271	Legacy	Alignment Gauge
307-272-01	Legacy	Adapter for 307-272
307-273	Legacy	Installer, Torque Converter Seal
307-282	Legacy	Protector, Piston Seal
307-287	Legacy	Servo Plug Repl/Needle BRG Replacer
307-295	Legacy	Remover/Replacer, Servo Cover
307-301	Legacy	Plate, Transmission Air Test
307-304-03	Legacy	Adapter for 307-304
307-322	Legacy	Protector, Reverse Piston Seal

Initial List of Loan Tools for the Ford Loan Tool Program

Global Tool Number	Application	Description
307-325	Legacy	Socket, Bearing Retainer
307-326	Legacy	Remover, Output Shaft
307-328	Legacy	Collet for 205-295
307-389	Legacy	Measuring Fixture, Second/Third Gear Brake
307-411	Legacy	Installer, Vent Tube
307-412KIT	Legacy	Plate, Transmission Air Test
307-423	Legacy	Seal Protector, FWD CL OTR Oil
307-426	Legacy	Gauge, Transmission Solenoid Connectors
307-436-01	Legacy	Adapter for 307-436
307-438	Legacy	Alignment Gauge, TR Sensor
307-439	Legacy	Installer, Halfshaft Seal LH
307-440	Legacy	Installer, Halfshaft Seal RH
307-530	Legacy	Installer, Differential Bearing Cup
307-661	Legacy	Gauge, End Play
307-S274	Legacy	Protector Set, Piston Seal
307-S290KIT	Legacy	Aligner, Selector Shaft
308-011	Legacy	Remover, Transmission Extension Housing Seal
308-031	Legacy	Replacer
308-040	Legacy	Remover/Installer, Selector Shaft Seal
308-085	Legacy	Installer, Input Shaft Bearing
308-110-01	Legacy	Adapter for 308-110
308-111-01	Legacy	Adapter for 308-111
308-114-01	Legacy	Adapter for 308-114
308-151	Legacy	Remover, MainshaftDouble Lip Seal
308-162	Legacy	Replacer, Diff. Bearing Cup
308-165	Legacy	Rotator, Differential
308-168	Legacy	Wrench, Locknut
308-174	Legacy	Spacer, Gear Installing
308-182	Legacy	Tool, Clutch Coupling
308-195	Legacy	Collet for 205-295
308-197	Legacy	Collet for 205-295
308-198	Legacy	Support Plate, Gear Removal
308-203-01	Legacy	Adapter for 308-203
308-219	Legacy	Pilot
308-228	Legacy	Adjustment Screw, Gearshift Lever
308-232	Legacy	Holding Fixture, Bearing Preload
308-233	Legacy	Holding Fixture, Bearing Preload
308-234	Legacy	Remover, Mainshaft Nut
308-235	Legacy	Aligner, Gearshift Lever
308-387	Legacy	Shifter Boot Sleeve
308-422	Legacy	Holding Tool Synchronizer Ring
308-423	Legacy	Spreader, Transfer Chain
308-424	Legacy	Adjustment Tool, Transfer Case
308-433	Legacy	Remover/Installer, Differential Bearing Cone
308-612	Legacy	Installer Shaft Seal
308-771	Legacy	Puller, Removing 5th speed drive gear bush
310-011	Legacy	Socket, Fuel Tank Sender Unit
310-017	Legacy	Holding Fixture, Dial Indicator Gauge (Fuel Injection Pump Timing)
310-025-15	Legacy	Test Hose for 310-025
310-026	Legacy	Wrench, tank sender
310-028	Legacy	Holding Fixture, Dial Indicator Gauge (Fuel Injection Pump Timing)
310-034	Legacy	Remover, Fuel Injector (Stanadyne)
310-034-01	Legacy	Adapter for 310-034
310-049	Legacy	Socket, Fuel Injector (28 mm)
310-055	Legacy	Timing Peg, Fuel Injection Pump
310-056	Legacy	Socket, Fuel Tank Sender Unit
310-059	Legacy	Wrench, Fuel Tank Lockring
310-064	Legacy	Wrench, Fuel Tank Sender Unit

Initial List of Loan Tools for the Ford Loan Tool Program

Global Tool Number	Application	Description
310-065A	Legacy	Wrench, Fuel Tank Sender Unit
310-095	Legacy	Remover
310-102	Legacy	Fuel Tank Siphoning Hose
310-122	Legacy	Connector, Fuel Pressure Gauge
310-240	Legacy	Adapter, Fuel Line (Diesel)
412-042	Legacy	Set, Heater Hose Disconnect TL
412-103	Legacy	Holding Tool, Compressor Clutch
412-105	Legacy	Adapter Kit, Quick Release Coupling (5/8")
412-118	Legacy	Adapter Kit, Quick Release Coupling (9/16")
418-038	Legacy	Simulator, Air Bag
418-143KIT	Legacy	Adapter Box (AC)
49 0180 510B	Legacy	Measuring Fixture
49 0221 251A	Legacy	Installer
49 0221 600C	Legacy	Expander
49 0259 720	Legacy	Remover
49 0727 570	Legacy	Gauge
49 0839 425C	Legacy	Remover
49 8531 565	Legacy	Measuring Fixture
49 B012 015	Legacy	Installer
49 B012 016	Legacy	Installer
49 B025 001	Legacy	Installer
49 B034 201	Legacy	Support Bar
49 D032 326A	Legacy	Remover
49 E011 1A0	Legacy	Holding Tool
49 F019 001	Legacy	Installer
49 F027 007	Legacy	Installer
49 F401 337A	Legacy	Installer
49 G011 001	Legacy	Remover
49 G019 011	Legacy	Installer
49 G019 017	Legacy	Installer
49 G030 728	Legacy	Installer
49 G030 795	Legacy	Installer
49 G030 797	Legacy	Handle
49 G032 341	Legacy	Installer
49 H033 101	Legacy	Remover
49 S010 001	Legacy	Installer
49 S011 103	Legacy	Installer
49 S033 106	Legacy	Installer
49 S033 107	Legacy	Installer
49 S120 170	Legacy	Remover
49 S120 710	Legacy	Universal Flange Holding Wrench
49 T019 001	Legacy	Installer
49 U027 008	Legacy	Gauge
49 U027 011	Legacy	Installer
49 U027 012	Legacy	Installer
49 U034 209	Legacy	Guide
49 U034 211	Legacy	Installer
49 W010 107A	Legacy	Installer
501-015	Legacy	Remover/Installer, Door Hinge Pin
501-018-02	Legacy	Adapter for 501-018
501-028A	Legacy	Pliers, Door Trim Removal
501-154	Legacy	Pliers
501-184	Legacy	Bending Tool
501-203	Legacy	Holding Tool
501-203-04	Legacy	Adapter for 501-203, Holding Tool, Instrument Panel
Coming Soon:		

Initial List of Loan Tools for the Ford Loan Tool Program

Global Tool Number	Application	Description
308-1030	Tourneo Connect - Q4 2023	Remover, Input Shaft
308-1031	Tourneo Connect - Q4 2023	Support Plate, Input and Output Shaft
308-1032	Tourneo Connect - Q4 2023	Holding Fixture, Input and Output Shaft
308-1033	Tourneo Connect - Q4 2023	Holding Fixture, Transmission Housing
308-1034	Tourneo Connect - Q4 2023	Support Plate, Input and Output Shaft
308-1035	Tourneo Connect - Q4 2023	Installer, Transmission Housing
308-1036	Tourneo Connect - Q4 2023	Installer, Selector Shaft
308-1037	Tourneo Connect - Q4 2023	Remover, Gear Wheel
308-1038	Tourneo Connect - Q4 2023	Extension, Dial Indicator
308-1039	Tourneo Connect - Q4 2023	Remover, Output Shaft Roller Bearing
308-1040	Tourneo Connect - Q4 2023	Support Tool, Output Shaft Roller Bearing
308-1041	Tourneo Connect - Q4 2023	Aligner, Clutch Disc
308-1042	Tourneo Connect - Q4 2023	Support Tool, Transmission Housing
308-1043	Tourneo Connect - Q4 2023	Installer, Halfshaft Seal LH
308-1044	Tourneo Connect - Q4 2023	Installer, Halfshaft Seal RH
308-1045	Tourneo Connect - Q4 2023	Support Tool, Input Shaft
308-1046	Tourneo Connect - Q4 2023	Holding Tool, Input Shaft
308-1047	Tourneo Connect - Q4 2023	Support Tool, Differential Bearing Cup
308-1048	Tourneo Connect - Q4 2023	Support Tool, Transmission Housing
308-1049	Tourneo Connect - Q4 2023	Installer, Differential Bearing Cup
308-1054	Tourneo Connect - Q4 2023	Remover, Synchro Gear Pack
308-1050	Tourneo Connect - Q4 2023	Remover, Differential Bearing Cup
308-1051	Tourneo Connect - Q4 2023	Installer, Transmission Housing
308-1052	Tourneo Connect - Q4 2023	Installer, Gear Wheel
308-1053	Tourneo Connect - Q4 2023	Installer, Gear Wheel
205-388	Transit BEV/ F-150 - Q4 2023	Replacer, Pinion Bearing
205-D017	Transit BEV/ F-150 - Q4 2023	Step Plate, Universal
302-006	Transit BEV/ F-150 - Q4 2023	Alignment Tool, Planetary Gear
206-040	Transit BEV/ F-150 - Q4 2023	Installer, Parking Brake Bearing
501-436	Transit Customs - Q3 2023	Holding Tool, Instrument Panel

more being added constantly

Status: 17.08.2023